


TRANSMISSION MOUNTING

Manual Transmission and Differential

4. Transmission Mounting

A: GENERAL

The transmission mounting consists of a pitching stopper, cushion rubber, and a cross member. In addition to support the transmission, these components absorb noise and vibration caused by the transmission.

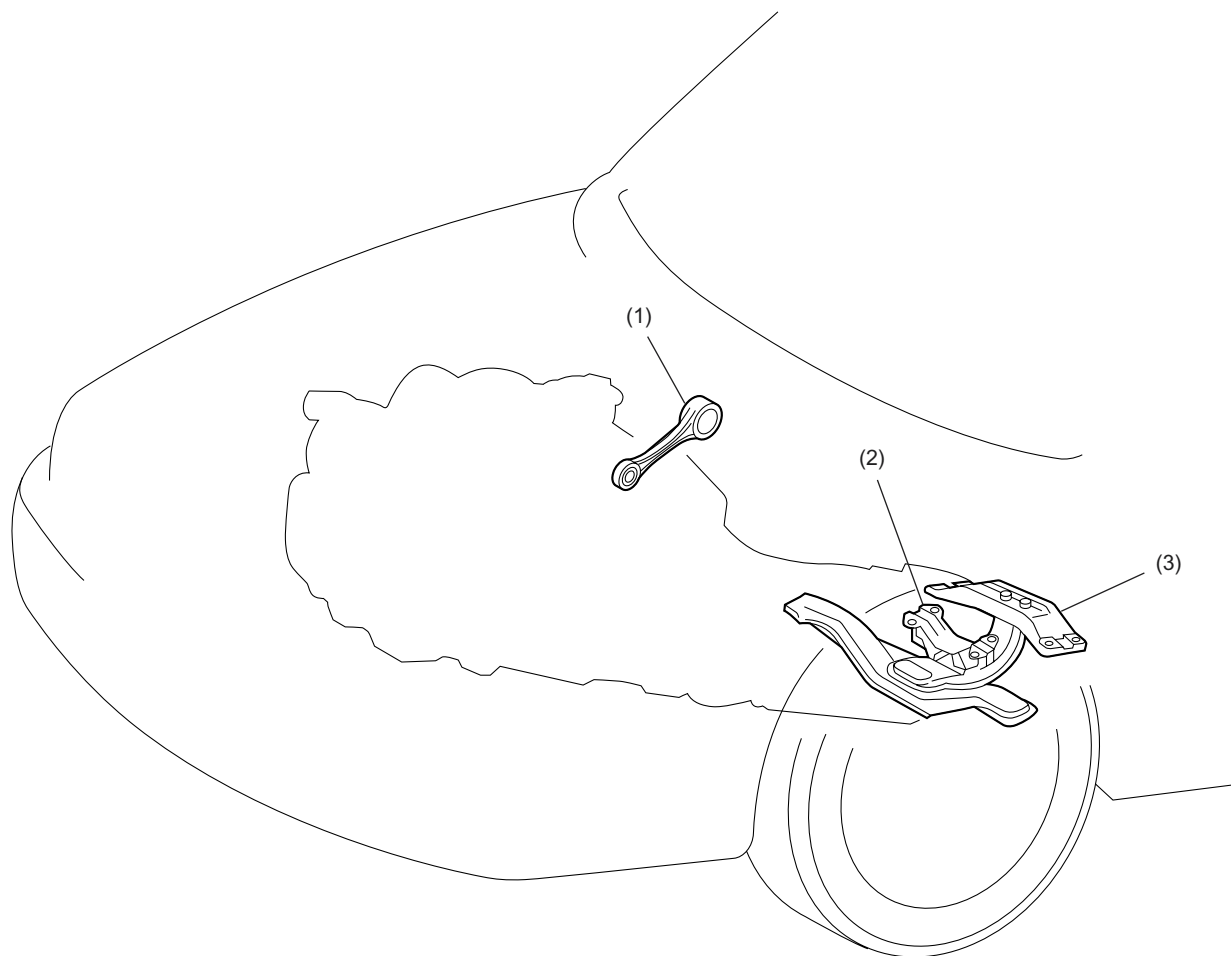

MT-00334

(1) Pitching stopper

(2) Cushion rubber

(3) Cross member

TRANSMISSION MOUNTING

Manual Transmission and Differential

MEMO