

BATTERY

Starting/Charging

3. Battery

The battery is located in the left front part of the engine compartment. It is held on a tray by the battery holder.

BATTERY

Starting/Charging

MEMO