

SUBARU SELECT MONITOR

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

6. Subaru Select Monitor


A: OPERATION

1. READ DIAGNOSTIC TROUBLE CODE

- 1) Prepare Subaru Select Monitor kit.
<Ref. to AT-8, PREPARATION TOOL, General Description.>




- 2) Connect diagnosis cable to Subaru Select Monitor.
3) Insert cartridge into Subaru Select Monitor.

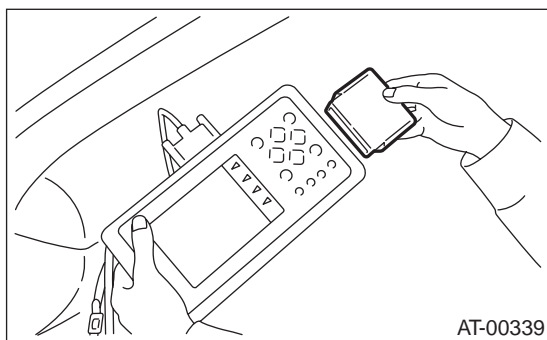

- 4) Connect Subaru Select Monitor to data link connector.

- (1) Data link connector located in the lower portion of the instrument panel (on the driver's side).

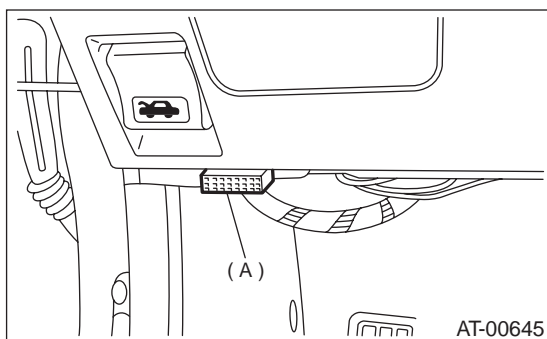


(A) Data link connector

- (2) Connect diagnosis cable to data link connector.

NOTE:

Do not connect scan tools except for Subaru Select Monitor and OBD-II general scan tool.

- 5) Turn ignition switch to ON (engine OFF) and Subaru Select Monitor switch to ON.

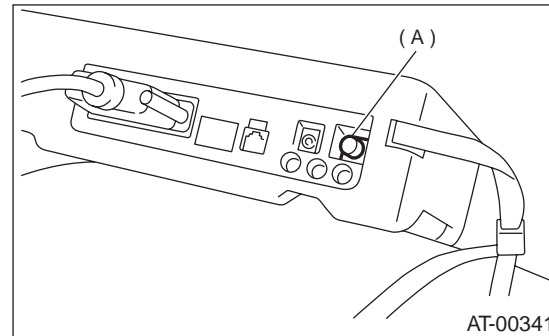

(A) Power switch

- 6) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
7) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
8) Press the [YES] key after displayed the information of transmission type.
9) On the «Transmission Diagnosis» display screen, select the {Diagnostic Code(s) Display} and press the [YES] key.
10) On the «Diagnostic Code(s) Display» display screen, select the {Latest Diagnostic Code(s)} or {Memorized Diagnostic Code(s)} and press the [YES] key.

NOTE:

• For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

• For detailed concerning diagnostic trouble codes, refer to the DIAGNOSTIC TROUBLE CODE LIST. <Ref. to AT-31, List of Diagnostic Trouble Code (DTC).>

2. READ CURRENT DATA

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
2) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
3) Press the [YES] key after displayed the information of transmission type.
4) On the «Transmission Diagnosis» display screen, select the {Current Data Display & Save} and press the [YES] key.

SUBARU SELECT MONITOR

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

5) On the «Data Display Menu» display screen, select the {Data Display} and press the [YES] key.

6) Using the scroll key, move the display screen up or down until the desired data is shown.

- A list of the support data is shown in the following table.

Contents	Display	Unit of measure
Battery voltage	Battery Voltage	V
Rear vehicle speed sensor signal	Rear Wheel Speed	km/h or MPH
Front vehicle speed sensor signal	Front Wheel Speed	km/h or MPH
Engine speed signal	Engine Speed	rpm
Automatic transmission fluid temperature signal	ATF Temp.	°C or °F
Throttle position signal	Throttle Sensor Voltage	V
Gear position	Gear Position	—
Line pressure control duty ratio	Line Pressure Duty Ratio	%
Lock up clutch control duty ratio	Lock Up Duty Ratio	%
Transfer clutch control duty ratio	Transfer Duty Ratio	%
Power supply for throttle position sensor	Throttle Sensor Power	V
Torque converter turbine speed signal	Turbine Revolution Speed	rpm
2-4 brake timing pressure control duty ratio	Brake Clutch Duty Ratio	%
Intake manifold pressure sensor voltage	Mani. Pressure Voltage	V
FWD switch signal (Without VDC system and SPORT shift)	FWD Switch	ON or OFF
Stop lamp switch signal	Stop Light Switch	ON or OFF
SPORT shift mode signal	Tip Mode Switch	ON or OFF
Shift-up signal (With SPORT shift)	Down Switch	ON or OFF
Shift-down signal (With SPORT shift)	Up Switch	ON or OFF
Anti lock brake system signal	ABS Signal	ON or OFF
Cruise control system signal	Cruise Control Signal	ON or OFF
Parking range signal	P Range Signal	ON or OFF
Neutral range signal	N Range Signal	ON or OFF
Reverse range signal	R Range Signal	ON or OFF
Drive range signal	D Range Signal	ON or OFF
3rd range signal	3rd Range Signal	ON or OFF
2nd range signal	2nd Range Signal	ON or OFF
1st range signal	1st Range Signal	ON or OFF
Shift control solenoid A	Shift Solenoid #1	ON or OFF
Shift control solenoid B	Shift Solenoid #2	ON or OFF
Torque control output signal #1	Torque Control Signal 1	ON or OFF
Torque control output signal #2	Torque Control Signal 2	ON or OFF
Torque control cut signal	Torque Control Cut Sig.	ON or OFF
2-4 brake timing control solenoid valve	2-4 Brake Timing Sol.	ON or OFF
Low clutch timing control solenoid valve	Low Clutch Timing Sol.	ON or OFF
SPORT shift solenoid valve (With SPORT shift)	Tip solenoid	ON or OFF
Automatic transmission diagnosis indicator lamp	Diagnosis Lamp	ON or OFF
Automatic transmission fluid temperature lamp	ATF Temperature Lamp	ON or OFF

NOTE:

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

SUBARU SELECT MONITOR

AUTOMATIC TRANSMISSION (DIAGNOSTICS)

3. CLEAR MEMORY MODE

- 1) On the «Main Menu» display screen, select the {2. Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Transmission Control System} and press the [YES] key.
- 3) Press the [YES] key after displayed the information of transmission type.
- 4) On the «Transmission Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
- 5) When the `Done' and `Turn Ignition Switch OFF' are shown on the display screen, turn the Subaru Select Monitor and ignition switch to OFF.

NOTE:

For detailed operation procedure, refer to the SUBARU SELECT MONITOR OPERATION MANUAL.

AT-25