



#### **CLEAR MEMORY MODE**

**AUTOMATIC TRANSMISSION (DIAGNOSTICS)** 

# 9. Clear Memory Mode

## **A: OPERATION**

### 1. WITHOUT SUBARU SELECT MONITOR

Current trouble codes shown on the display are cleared by turning the ignition switch OFF after conducting on-board diagnostics operation. Previous trouble codes, however, cannot be cleared since they are stored in the TCM memory which is operating on the back-up power supply. These trouble codes can be cleared by removing the specified TCM connector for at least 2 minutes.

#### **CLEAR MEMORY:**

Without VDC system and SPORT shift: Remove the TCM connector (B55). With VDC system or SPORT shift: Remove the TCM connector (B56).

- The TCM connector is located in the line to the memory back-up power supply of the TCM. Removal of this fuse clears the previous trouble codes stored in the TCM memory.
- Be sure to remove the TCM connector for at least the specified length of time. Otherwise, trouble codes may not be cleared.

#### 2. WITH SUBARU SELECT MONITOR

Refer to SUBARU SELECT MONITOR for information about how to clear trouble codes. <Ref. to AT-25, CLEAR MEMORY MODE, OPER-ATION, Subaru Select Monitor.>





