

REAR VEHICLE SPEED SENSOR

AUTOMATIC TRANSMISSION

14.Rear Vehicle Speed Sensor

A: REMOVAL

When removing the rear vehicle speed sensor, refer to "Front Vehicle Speed Sensor." <Ref. to AT-54, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

When installing the rear vehicle speed sensor, refer to "Front Vehicle Speed Sensor." <Ref. to AT-56, INSTALLATION, Front Vehicle Speed Sensor.>

AT-58

Vehicle-id:
SIE-id::A:REMOVAL