

TORQUE CONVERTER TURBINE SPEED SENSOR

AUTOMATIC TRANSMISSION

15. Torque Converter Turbine Speed Sensor

A: REMOVAL

When removing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor."
<Ref. to AT-54, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

When installing the torque converter turbine speed sensor, refer to "Front Vehicle Speed Sensor."
<Ref. to AT-56, INSTALLATION, Front Vehicle Speed Sensor.>

AT-59

Vehicle-id:
SIE-id::A:REMOVAL