


AIR BREATHER HOSE

AUTOMATIC TRANSMISSION

23. Air Breather Hose

A: REMOVAL


- 1) Remove the air cleaner case. (2.5 L model)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
- 2) Remove air intake chamber. (3.0 L model)
<Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 3) Disconnect the air breather hoses.

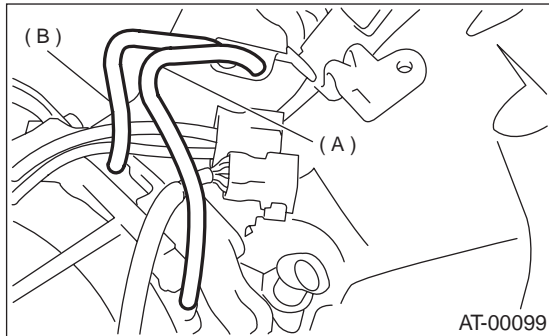

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

B: INSTALLATION

- 1) Install air breather hoses.

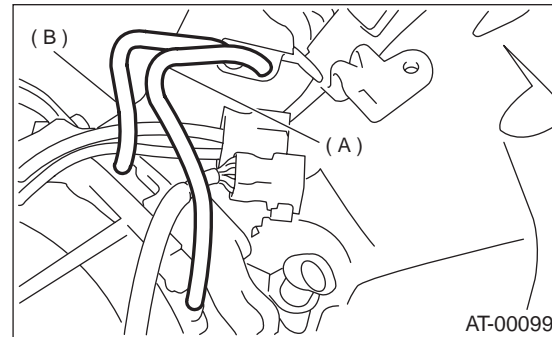

- (A) Air breather hose (Transmission case)
- (B) Air breather hose (Oil pump housing)

- 2) Install the air cleaner case. (2.5 L model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
- 3) Install air intake chamber. (3.0 L model)
<Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>

C: INSPECTION

Make sure the hose is not cracked or clogged.