


OIL CHARGER PIPE

AUTOMATIC TRANSMISSION

24.Oil Charger Pipe**A: REMOVAL**


- 1) Remove the air cleaner case. (2.5 L model)
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
- 2) Remove air intake chamber. (3.0 L model)
<Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 3) Remove the oil charger pipe, and remove the O-ring from the flange face.

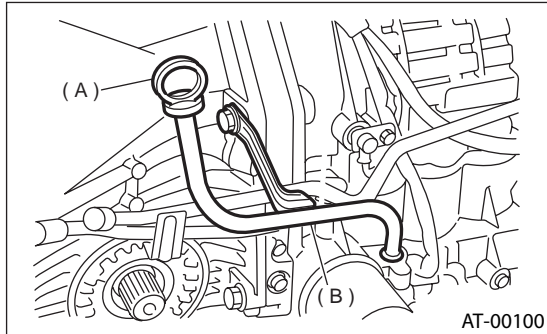

- (A) Oil level gauge
(B) Oil charger pipe

B: INSTALLATION

- 1) Install the oil charger pipe with new O-ring.

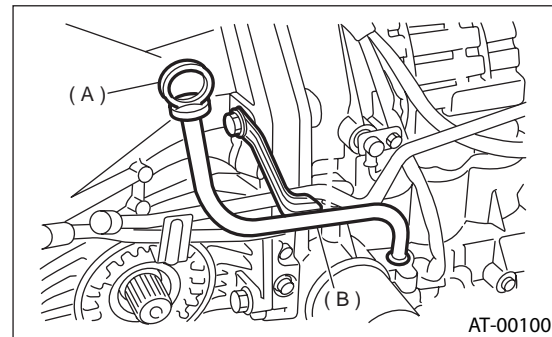Tightening torque:**41 N·m (4.2 kgf-m, 30.4 ft-lb)**

- (A) Oil level gauge
(B) Oil charger pipe

- 2) Install the air cleaner case. (2.5 L model)
<Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>
- 3) Install air intake chamber. (3.0 L model)
<Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>

C: INSPECTION

Make sure the oil charger pipe is not deformed or otherwise damaged.