


## OIL PUMP

AUTOMATIC TRANSMISSION

## 35.Oil Pump


## A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to AT-39, REMOVAL, Automatic Transmission Assembly.>
- 2) Extract the torque converter clutch assembly. <Ref. to AT-84, REMOVAL, Torque Converter Clutch Assembly.>
- 3) Remove the input shaft.

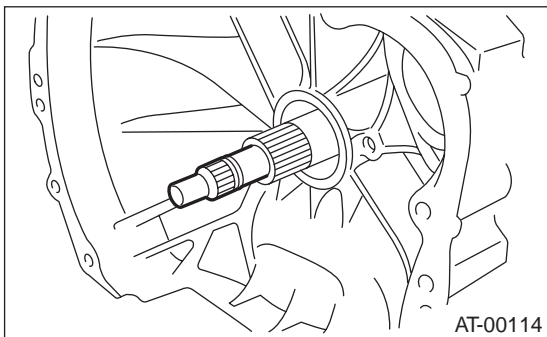

- 4) Lift-up lever behind the transmission harness connector and disconnect it from stay.
- 5) Disconnect inhibitor switch connector from stay.
- 6) Disconnect the air breather hose. <Ref. to AT-82, REMOVAL, Air Breather Hose.>
- 7) Remove the oil charger pipe. <Ref. to AT-83, REMOVAL, Oil Charger Pipe.>
- 8) Remove the oil cooler inlet and outlet pipes. <Ref. to AT-77, REMOVAL, ATF Cooler Pipe and Hose.>
- 9) Separation of torque converter clutch case and transmission case sections <Ref. to AT-108, REMOVAL, Torque Converter Clutch Case.>
- 10) Separate transmission case and extension case sections. <Ref. to AT-85, REMOVAL, Extension Case.>
- 11) Remove the reduction drive gear. (MPT model) <Ref. to AT-103, REMOVAL, Reduction Drive Gear.>
- 12) Remove the center differential carrier. (VTD model) <Ref. to AT-105, REMOVAL, Center Differential Carrier.>
- 13) Remove the reduction driven gear. <Ref. to AT-100, REMOVAL, REMOVAL, Reduction Driven Gear.>


- 14) Loosen the taper roller bearing mounting bolts.

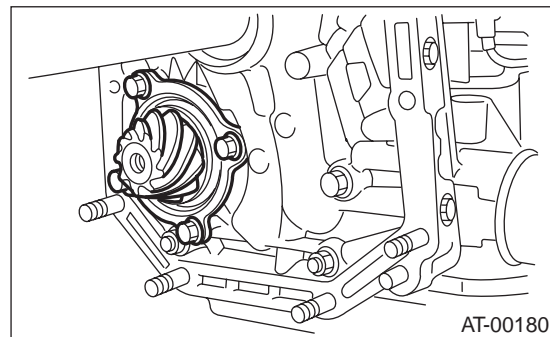


- 15) Place two wooden blocks on the workbench, and stand the transmission case with its rear end facing down.

## NOTE:

- Be careful not to scratch the rear mating surface of the transmission case.
- Note that the parking rod and drive pinion protrude from the mating surface.

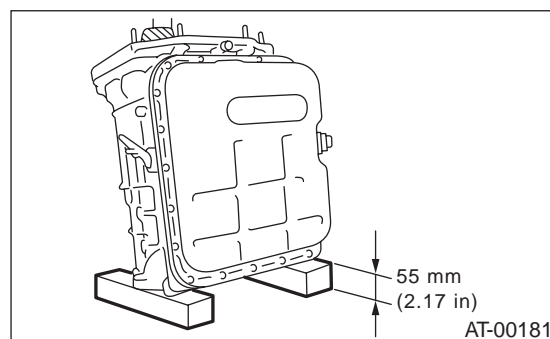

- 16) Remove the oil pump housing and adjusting thrust washer.

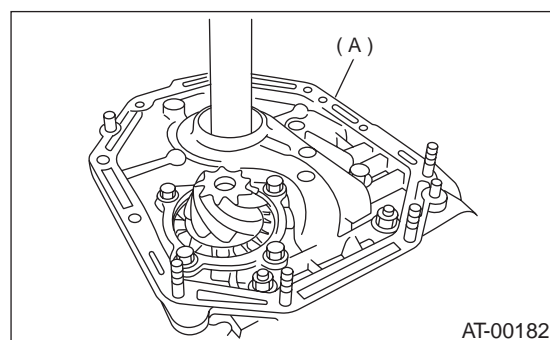


(A) Oil pump housing

AT-111

## OIL PUMP

### AUTOMATIC TRANSMISSION

- 17) Remove the oil seal retainer.  
Also remove the O-ring and oil seal (air breather).

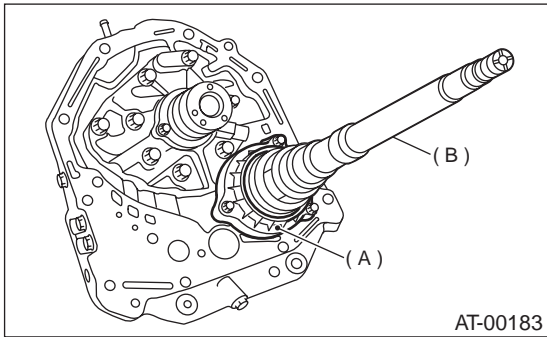

- (A) Oil seal retainer  
(B) Drive pinion shaft

- 18) Remove O-rings from oil pump housing.  
19) Remove the drive pinion assembly.

### B: INSTALLATION

- 1) Assemble the drive pinion assembly to the oil pump housing.


#### NOTE:

- Be careful not to bend the shims.
- Be careful not to force the pinion against the housing bore.

- 2) Tighten four bolts to secure the roller bearing.


#### Tightening torque:

**40 N·m (4.1 kgf-m, 30 ft-lb)**

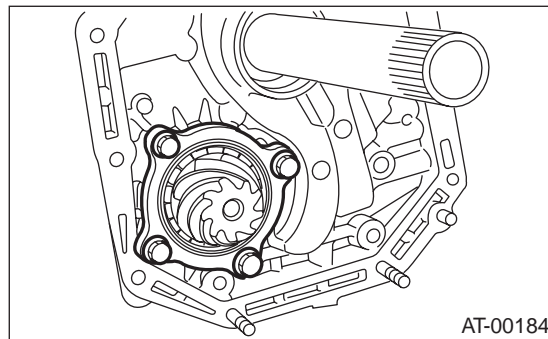

- 3) With pay attention to the orientation of the oil seals, install two new oil seals to the oil seal retainer using ST.

ST 499247300 INSTALLER

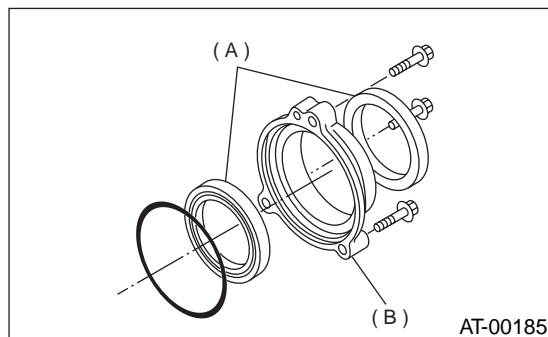


- (A) Oil seal  
(B) Oil seal retainer

AT-112

## OIL PUMP

AUTOMATIC TRANSMISSION


4) Attach the new O-ring to the oil seal retainer with vaseline. Install the seal to the oil pump housing bore.

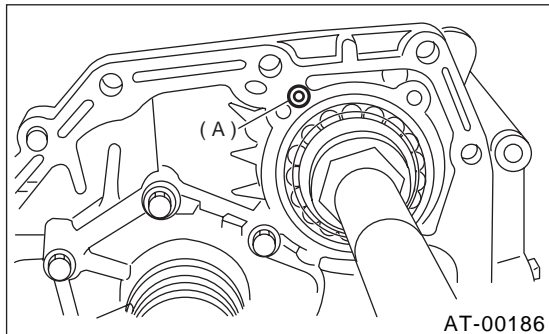

(A) O-ring

5) Install the oil seal retainer taking care not to damage the oil seal lips. Then secure with three bolts.

**Tightening torque:**  
**7 N·m (0.7 kgf-m, 5.1 ft-lb)**

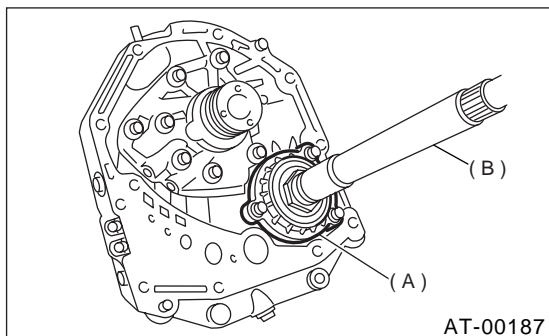


(A) Oil seal retainer  
(B) Drive pinion shaft

6) Make sure the O-ring is fitted correctly in position.

7) Secure the housing with two nuts and the bolt.

**Tightening torque:**  
**42 N·m (4.3 kgf-m, 31 ft-lb)**

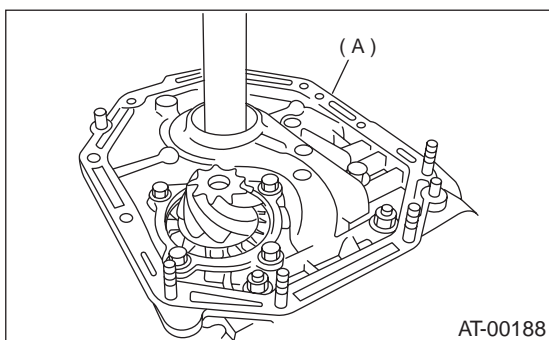

(A) Oil pump housing

8) Install the torque converter clutch case assembly to the transmission case assembly. <Ref. to AT-84, INSTALLATION, Torque Converter Clutch Assembly.>


9) Install reduction driven gear. <Ref. to AT-101, INSTALLATION, Reduction Driven Gear.>

10) Install the reduction drive gear. (MPT model) <Ref. to AT-103, INSTALLATION, Reduction Drive Gear.>

11) Install the center differential carrier. (VTD model) <Ref. to AT-105, INSTALLATION, Center Differential Carrier.>

12) Combine the extension case with the transmission case, and install vehicle speed sensor 1 (rear). <Ref. to AT-85, INSTALLATION, Extension Case.>

13) Insert inhibitor switch and transmission connector into stay.

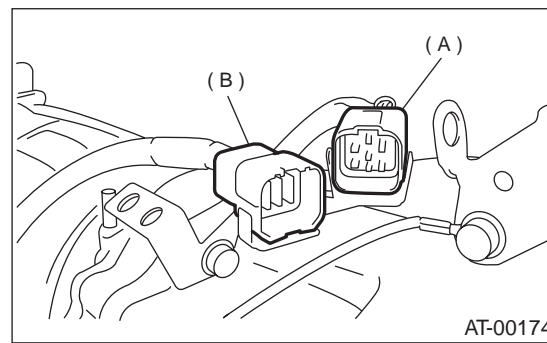

(A) Transmission harness  
(B) Inhibitor switch harness


14) Install air breather hose. <Ref. to AT-82, INSTALLATION, Air Breather Hose.>

15) Install the oil cooler pipe. <Ref. to AT-79, INSTALLATION, ATF Cooler Pipe and Hose.>

16) Install the oil charger pipe with O-ring. <Ref. to AT-83, INSTALLATION, Oil Charger Pipe.>

17) Insert the input shaft while turning lightly by hand. At this time, not to damage the bushing.

**Normal protrusion A:**  
**50 — 55 mm (1.97 — 2.17 in)**

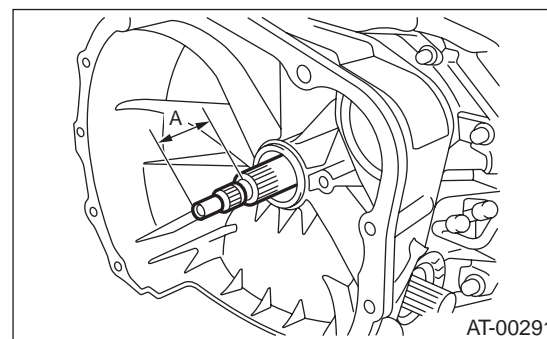

18) Install the torque converter clutch assembly. <Ref. to AT-84, INSTALLATION, Torque Converter Clutch Assembly.>

AT-113


## OIL PUMP

### AUTOMATIC TRANSMISSION

19) Install the transmission assembly to the vehicle. <Ref. to AT-42, INSTALLATION, Automatic Transmission Assembly.>


#### C: DISASSEMBLY

1) Remove four seal rings.

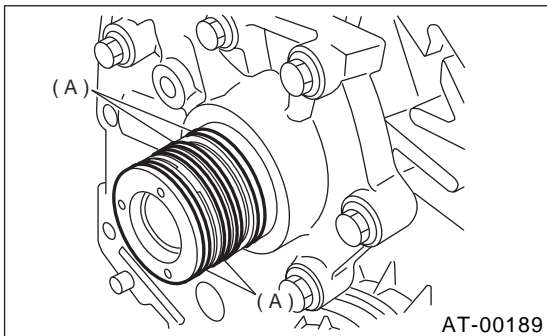


(A) Seal rings

2) Lightly tap the end of the stator shaft to remove the cover.

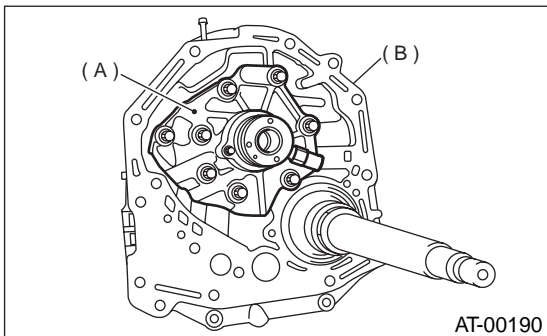

(A) Oil pump cover  
(B) Oil pump housing


3) Remove the inner and outer rotor.

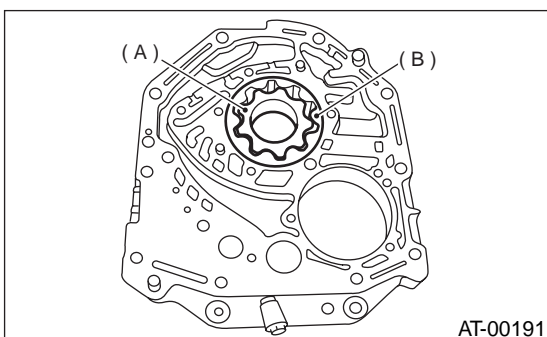

(A) Inner rotor  
(B) Outer rotor

#### D: ASSEMBLY

1) Install oil pump rotor assembly to oil pump housing.

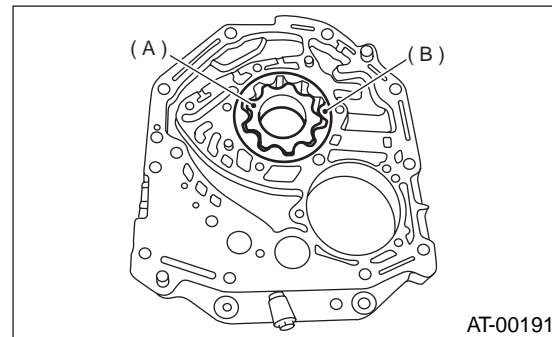


(A) Inner rotor  
(B) Outer rotor

2) Align both pivots with the pivot holes of the cover, and install the oil pump cover being careful not to apply undue force to the pivots.

#### Tightening torque:

**25 N·m (2.5 kgf·m, 18.1 ft·lb)**

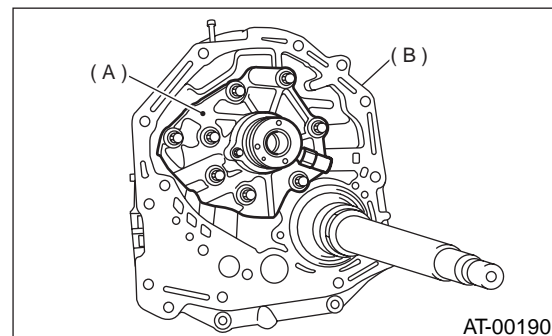


(A) Oil pump cover  
(B) Oil pump housing

3) After assembling, turn the oil pump shaft to check for smooth rotation of the rotor.

## OIL PUMP

AUTOMATIC TRANSMISSION

4) Install the oil seal retainer and new seal rings. After adjusting the drive pinion backlash and tooth contact. <Ref. to AT-116, ADJUSTMENT, Oil Pump.>

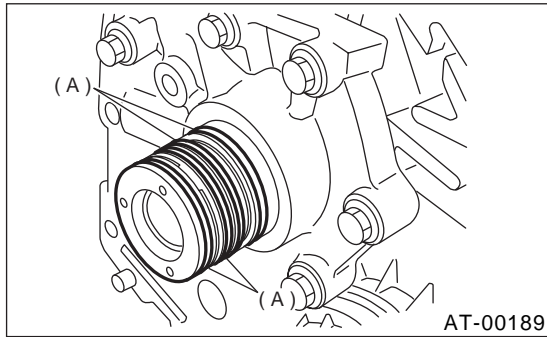


(A) Seal rings

### E: INSPECTION

- 1) Check seal ring and O-ring oil seal for breaks or damage.
- 2) Check other parts for dents or abnormalities.
- 3) Selection of oil pump rotor assembly
  - (1) Tip clearance  
Install inner rotor and outer rotor to oil pump. With rotor gears facing each other, measure crest-to-crest clearance.


**Tip clearance:**  
**0.02 — 0.15 mm (0.0008 — 0.0059 in)**

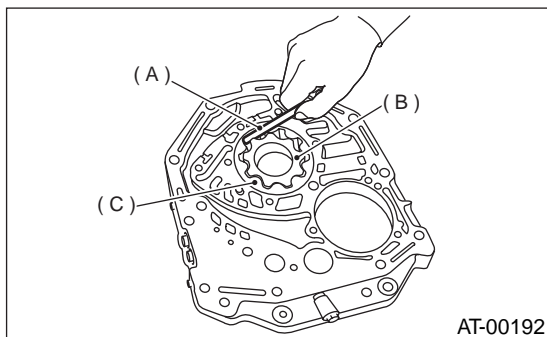

(A) Thickness gauge  
(B) Inner rotor  
(C) Outer rotor

- (2) Side clearance  
Set a depth gauge to oil pump housing, then measure oil pump housing-to-rotor clearances.

**Side clearance:**  
**0.02 — 0.04 mm (0.0008 — 0.0016 in)**

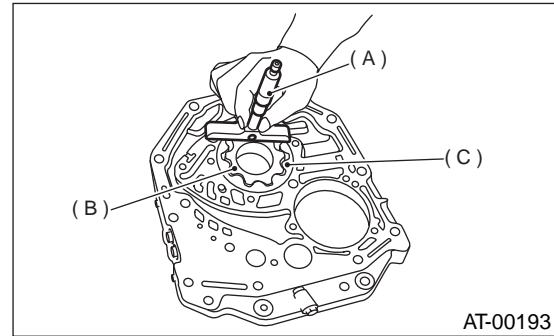

(A) Depth gauge  
(B) Inner rotor  
(C) Outer rotor

- (3) If depth and/or side clearances are outside specifications, replace rotor assembly.

Oil pump rotor assembly	
Part No.	Thickness mm (in)
15008AA060	11.37 — 11.38 (0.4476 — 0.4480)
15008AA070	11.38 — 11.39 (0.4480 — 0.4484)
15008AA080	11.39 — 11.40 (0.4484 — 0.4488)

- Measure the total end play and adjust to within specifications. <Ref. to AT-116, ADJUSTMENT, Oil Pump.>

AT-115


## OIL PUMP

### AUTOMATIC TRANSMISSION

#### F: ADJUSTMENT


1) Using ST, measure the distance from the transmission case mating surface to the recessed portion of the high clutch drum "L".

ST 398643600 GAUGE

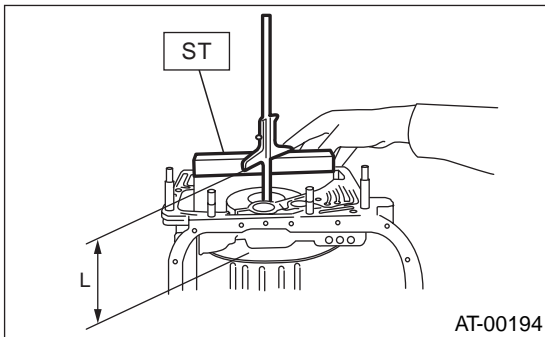

2) Using ST, measure the distance from the oil pump housing mating surface to the top surface of the oil pump cover with thrust needle bearing.

ST 398643600 GAUGE

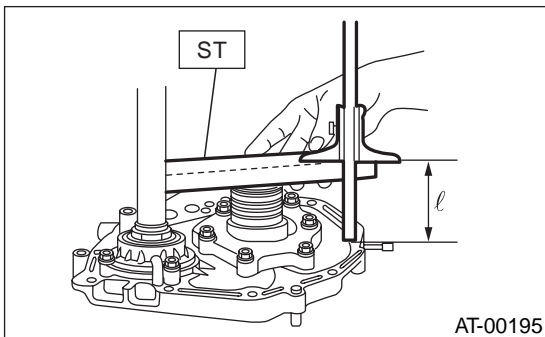


3) Calculation of total end play

Select suitable bearing race from among those listed in this table so that clearance C is in the 0.25 to 0.55 mm (0.0098 to 0.0217 in) range.

$$C = (L + G) - \varnothing$$

C	Clearance between concave portion of high clutch and end of clutch drum support
L	Length from case mating surface to concave portion of high clutch
G	Gasket thickness [0.28 mm (0.0110 in)]
$\varnothing$	Height from housing mating surface to upper surface of clutch drum support

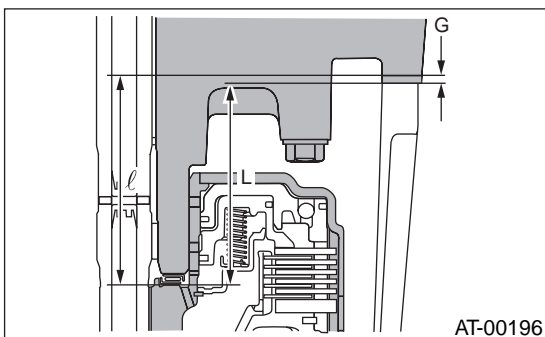

Thrust needle bearing	
Part No.	Thickness mm (in)
806528050	4.1 (0.161)
806528060	4.3 (0.169)
806528070	4.5 (0.177)
806528080	4.7 (0.185)
806528090	4.9 (0.193)
806528100	5.1 (0.201)

4) After completing end play adjustment, insert the bearing race in the recess of the high clutch. Attach the thrust needle bearing to the oil pump cover with vaseline.

5) After correctly installing the new gasket to the case mating surface, carefully install the oil pump housing assembly. Be careful to avoid hitting the drive pinion against the inside of the case.

6) Install both parts with dowel pins aligned. Make sure no clearance exists at the mating surface.

AT-116