

OIL SEAL

MANUAL TRANSMISSION AND DIFFERENTIAL

5. Oil Seal**A: INSPECTION**


Check oil seal portion for leakage. If leakage is found, replace oil seal with new one.

B: REPLACEMENT


- 1) Clean transmission exterior.
- 2) Drain gear oil completely.
- 3) Tighten drain plug with a new gasket.

Tightening torque:

44 N·m (4.5 kgf-m, 32.5 ft-lb)

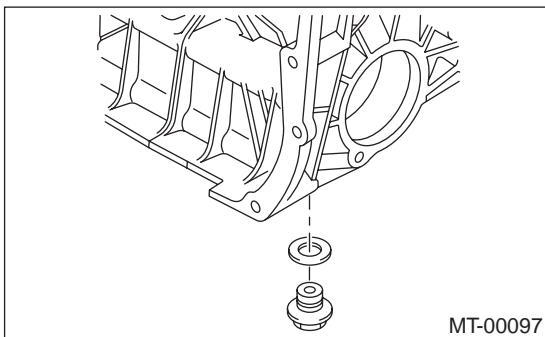


- 4) Remove rear exhaust pipe and muffler. <Ref. to EX(H4SO)-9, REMOVAL, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>
- 5) Remove heat shield cover.
- 6) Remove propeller shaft. <Ref. to DS-14, REMOVAL, Propeller Shaft.>
- 7) Using ST, remove the oil seal.
ST 398527700 PULLER ASSY

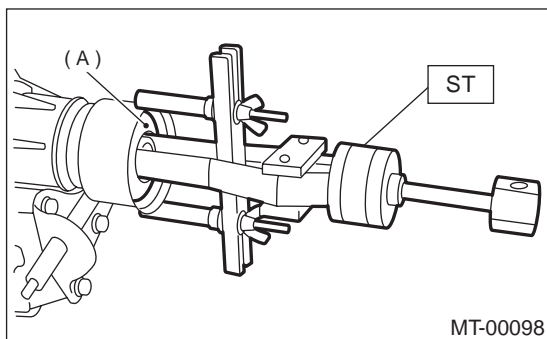

(A) Oil seal

- 8) Using ST and hammer, install a new oil seal.
ST 498057300 INSTALLER

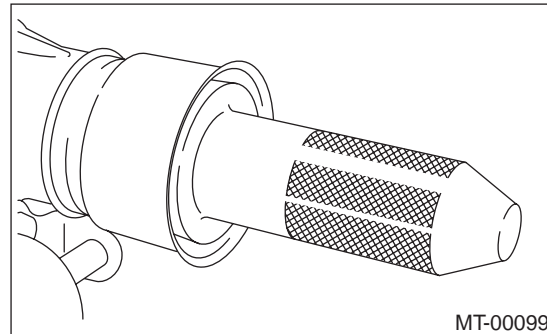

- 9) Install the propeller shaft. <Ref. to DS-15, INSTALLATION, Propeller Shaft.>
- 10) Install the heat shield cover.
- 11) Install the rear exhaust pipe and muffler. <Ref. to EX(H4SO)-9, INSTALLATION, Rear Exhaust Pipe.> and <Ref. to EX(H4SO)-10, INSTALLATION, Muffler.>
- 12) Pour gear oil and check the oil level. <Ref. to MT-25, REPLACEMENT, Transmission Gear Oil.>

MT-33