

CENTER DIFFERENTIAL

MANUAL TRANSMISSION AND DIFFERENTIAL

12.Center Differential

A: REMOVAL

- 1) Remove the manual transmission assembly from vehicle. <Ref. to MT-26, REMOVAL, Manual Transmission Assembly.>
- 2) Remove the transfer case with extension case assembly. <Ref. to MT-38, REMOVAL, Transfer Case and Extension Case Assembly.>
- 3) Remove the extension case assembly. <Ref. to MT-38, REMOVAL, Transfer Case and Extension Case Assembly.>
- 4) Remove the transfer driven gear. <Ref. to MT-44, REMOVAL, Transfer Driven Gear.>
- 5) Remove the center differential.

B: INSTALLATION


- 1) Install the center differential into transfer case.
- 2) Install the transfer driven gear. <Ref. to MT-44, INSTALLATION, Transfer Driven Gear.>
- 3) Install the extension case assembly. <Ref. to MT-38, INSTALLATION, Transfer Case and Extension Case Assembly.>
- 4) Install the transfer case with extension case assembly. <Ref. to MT-38, INSTALLATION, Transfer Case and Extension Case Assembly.>
- 5) Install the back-up light switch and neutral position switch. <Ref. to MT-34, INSTALLATION, Switches and Harness.>
- 6) Install the manual transmission assembly to vehicle. <Ref. to MT-28, INSTALLATION, Manual Transmission Assembly.>

C: DISASSEMBLY

NOTE:

- Do not disassemble center differential because it is a non-disassemble part.
- Remove ball bearing using ST.
- Do not reuse ball bearing.

ST 498077300 CENTER DIFFERENTIAL BEARING REMOVER

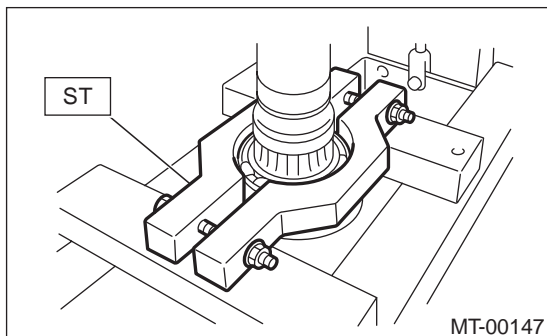


D: ASSEMBLY

Install ball bearing to center differential assembly.

NOTE:

Do not apply pressure in excess of 10 kN (1 ton, 1.1 US ton, 1.0 Imp ton).

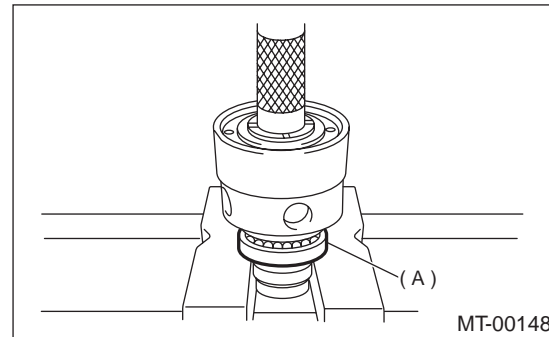

(A) Ball bearing

E: INSPECTION

1) Bearings

Replace bearings in the following cases:

- Broken or rusty bearings
- Worn or damaged
- Bearings that fail to turn smoothly or make abnormal noise when turned after gear oil lubrication.
- Bearings having other defects

2) Center differential

Replace center differential assembly in the following case:

- Worn or damaged

MT-46