

INTAKE (INDUCTION)

IN(H4DOTC)

	Page
1. General Description	2
2. Air Cleaner	7
3. Air Intake Duct.....	8
4. Intake Duct	9
5. Intercooler	10
6. Turbocharger.....	12
7. Air Bypass Valve	14
8. Resonator Chamber	15


GENERAL DESCRIPTION

INTAKE (INDUCTION)

1. General Description

A: COMPONENT

1. AIR CLEANER

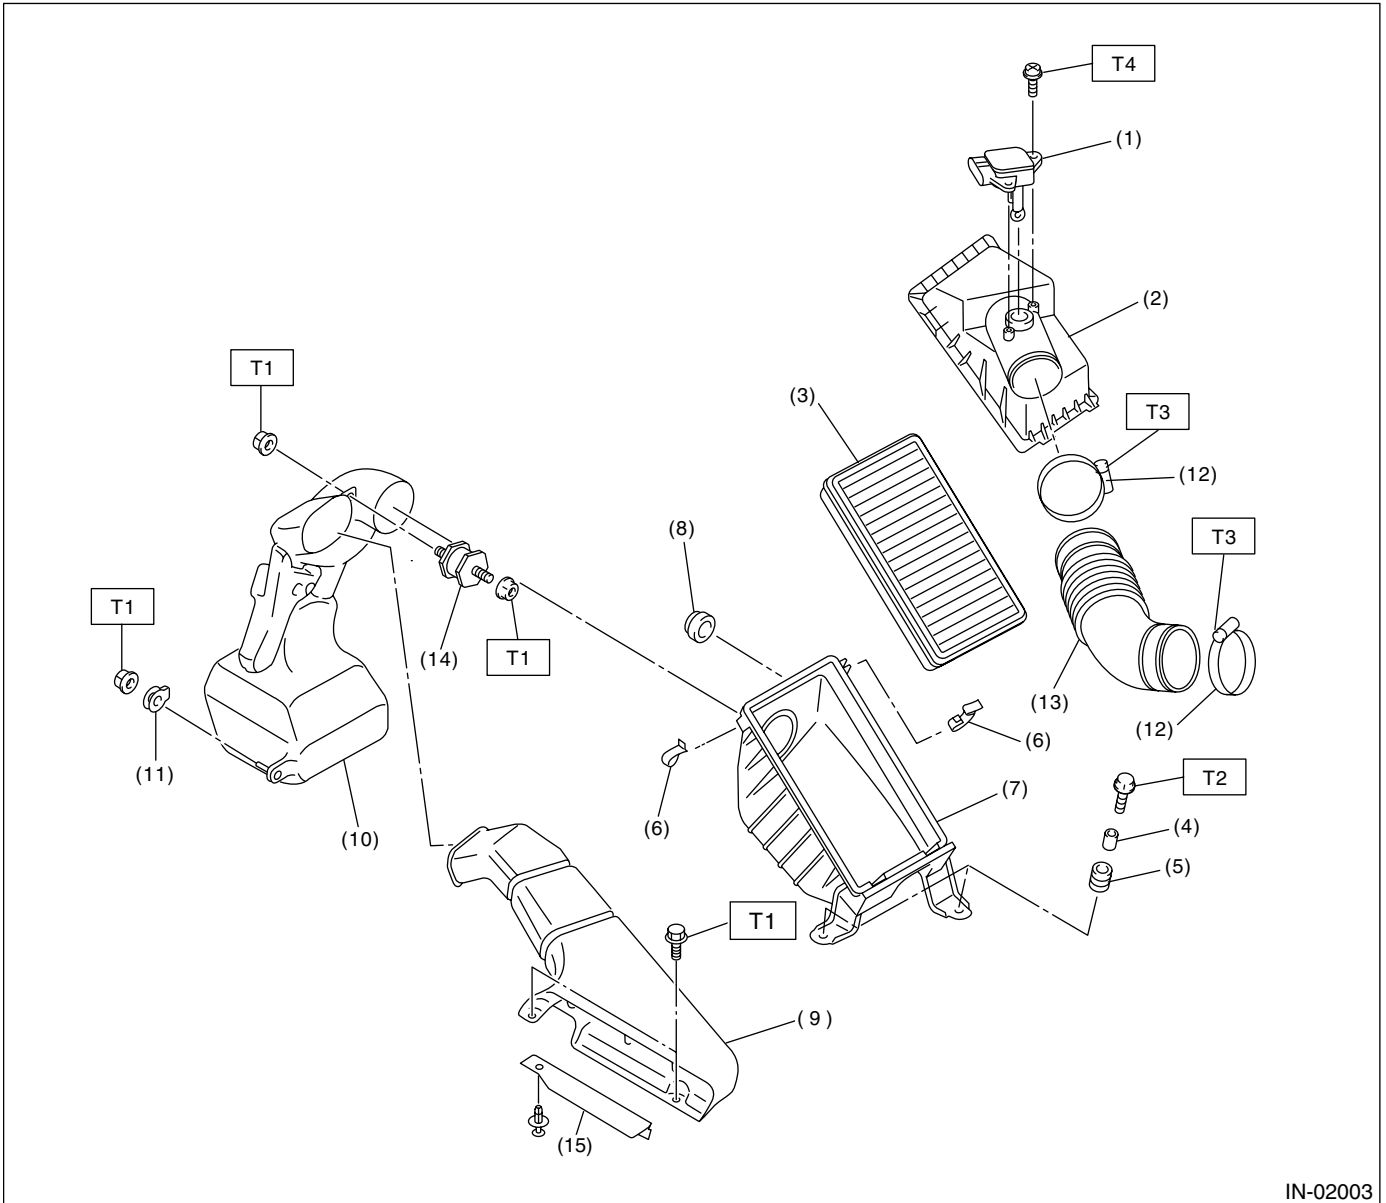

IN-02003

- | | |
|---|-----------------------------|
| (1) Mass air flow and intake air temperature sensor | (8) Cushion |
| (2) Air cleaner upper cover | (9) Air intake duct |
| (3) Air cleaner element | (10) Resonator chamber ASSY |
| (4) Spacer | (11) Cushion |
| (5) Cushion | (12) Clamp |
| (6) Clip | (13) Air intake boot |
| (7) Air cleaner lower case | (14) Cushion |
| | (15) Plate |

Tightening torque: N·m (kgf·m, ft·lb)


T1: 7.5 (0.76, 5.5)

T2: 33 (3.4, 24.6)

T3: 2.5 (0.25, 1.8)

T4: 1.0 (0.10, 1)

2. INTAKE DUCT

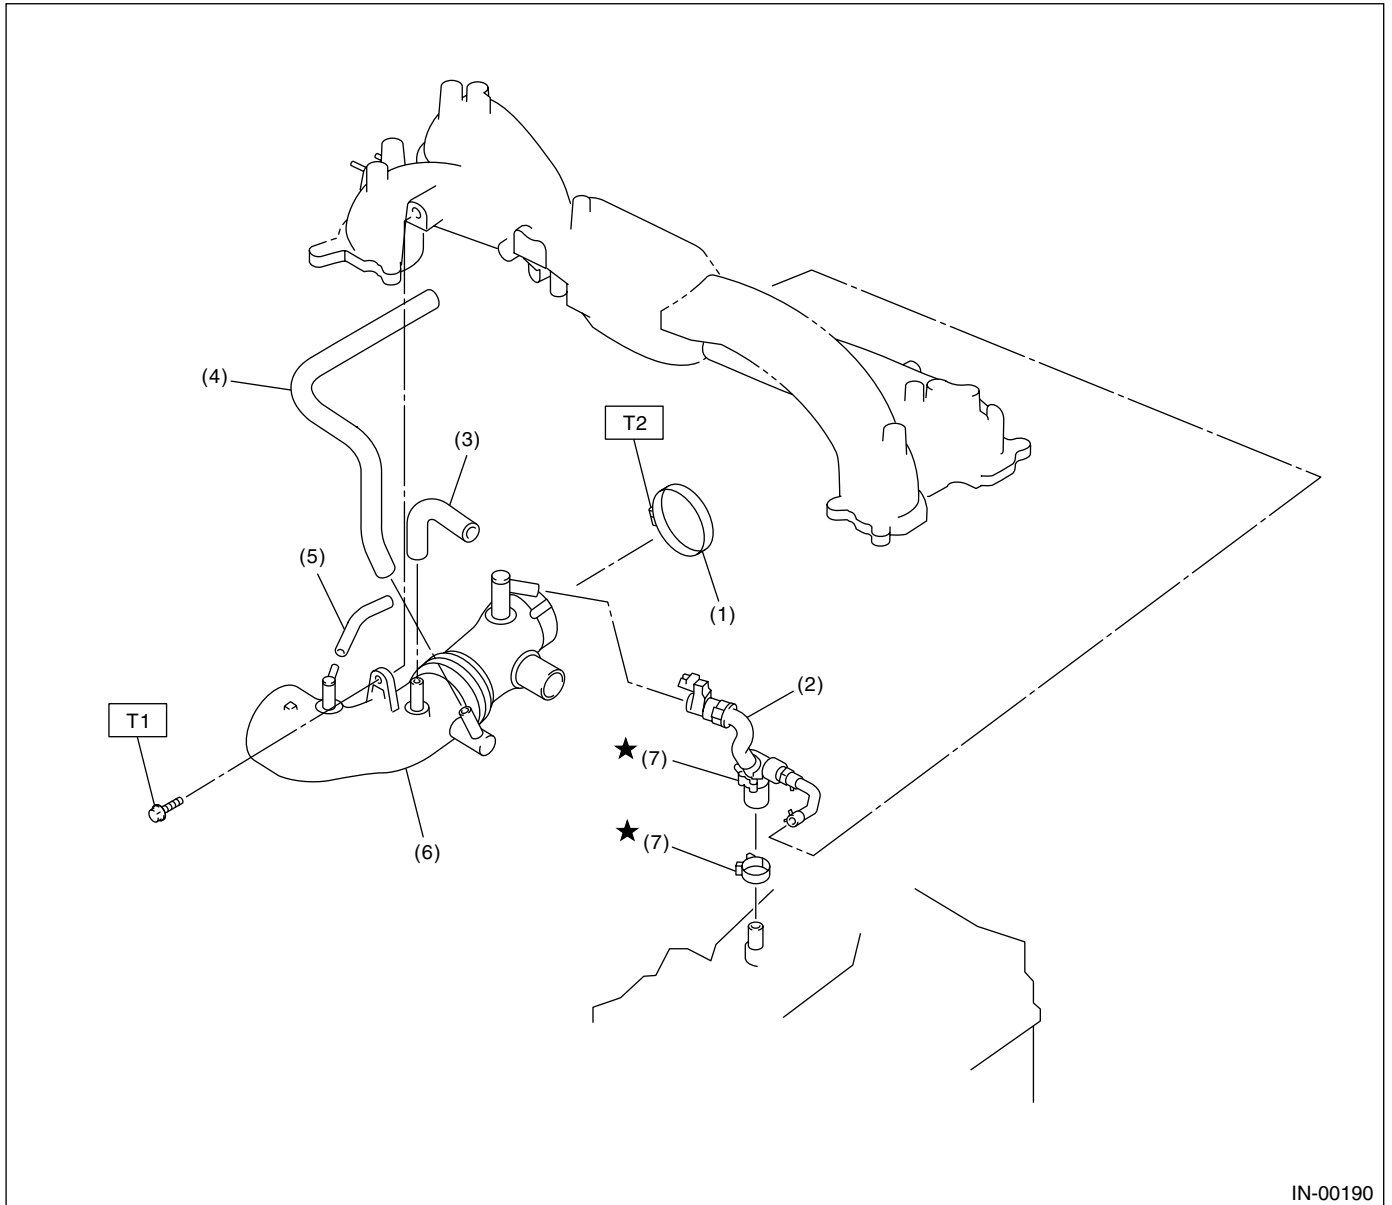

IN-00190

- | | |
|-----------------------|-----------------------|
| (1) Clamp | (5) Air bypass hose C |
| (2) PCV hose ASSY | (6) Intake duct |
| (3) Air bypass hose A | (7) Clamp |
| (4) Air bypass hose B | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 19 (1.9, 13.7)

T2: 3 (0.3, 2.2)

GENERAL DESCRIPTION

INTAKE (INDUCTION)

3. INTERCOOLER

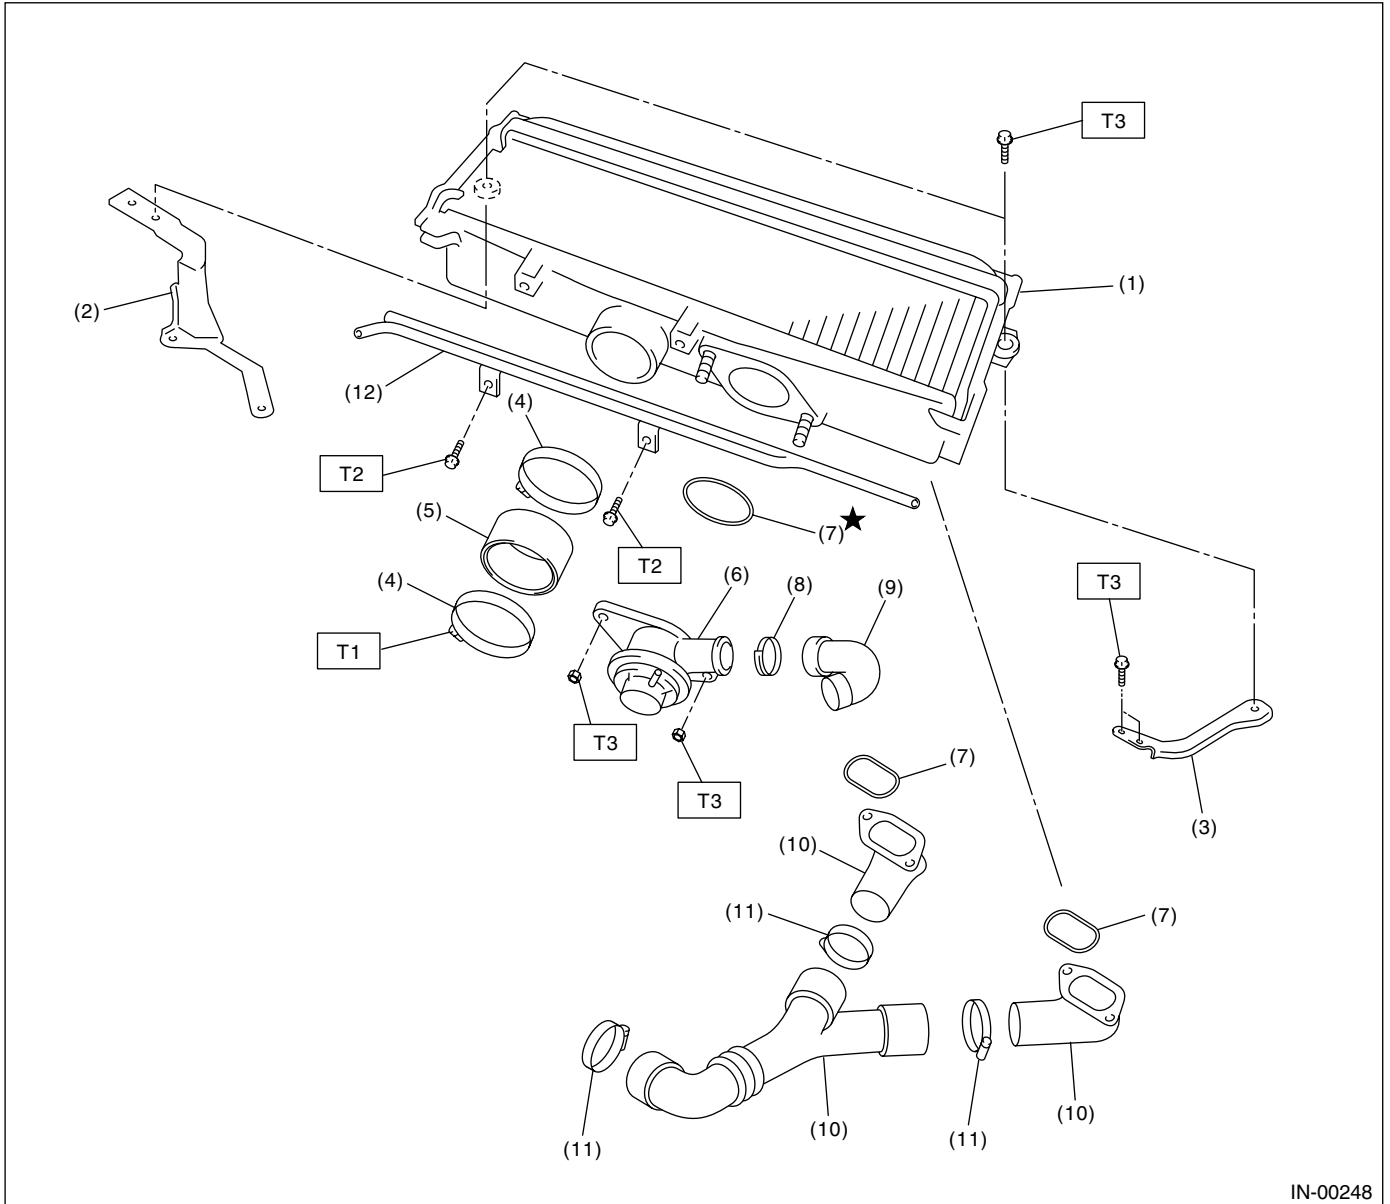

IN-00248

- | | |
|----------------------------|-----------------------|
| (1) Intercooler | (7) O-ring |
| (2) Intercooler bracket RH | (8) Clamp |
| (3) Intercooler bracket LH | (9) Air bypass hose A |
| (4) Clamp | (10) Intercooler duct |
| (5) Air intake duct | (11) Clamp |
| (6) Air bypass valve | (12) PCV pipe |


Tightening torque: N·m (kgf-m, ft-lb)

T1: 3 (0.3, 2.2)

T2: 6.1 (0.62, 4.2)

T3: 16 (1.6, 11.6)

4. TURBOCHARGER

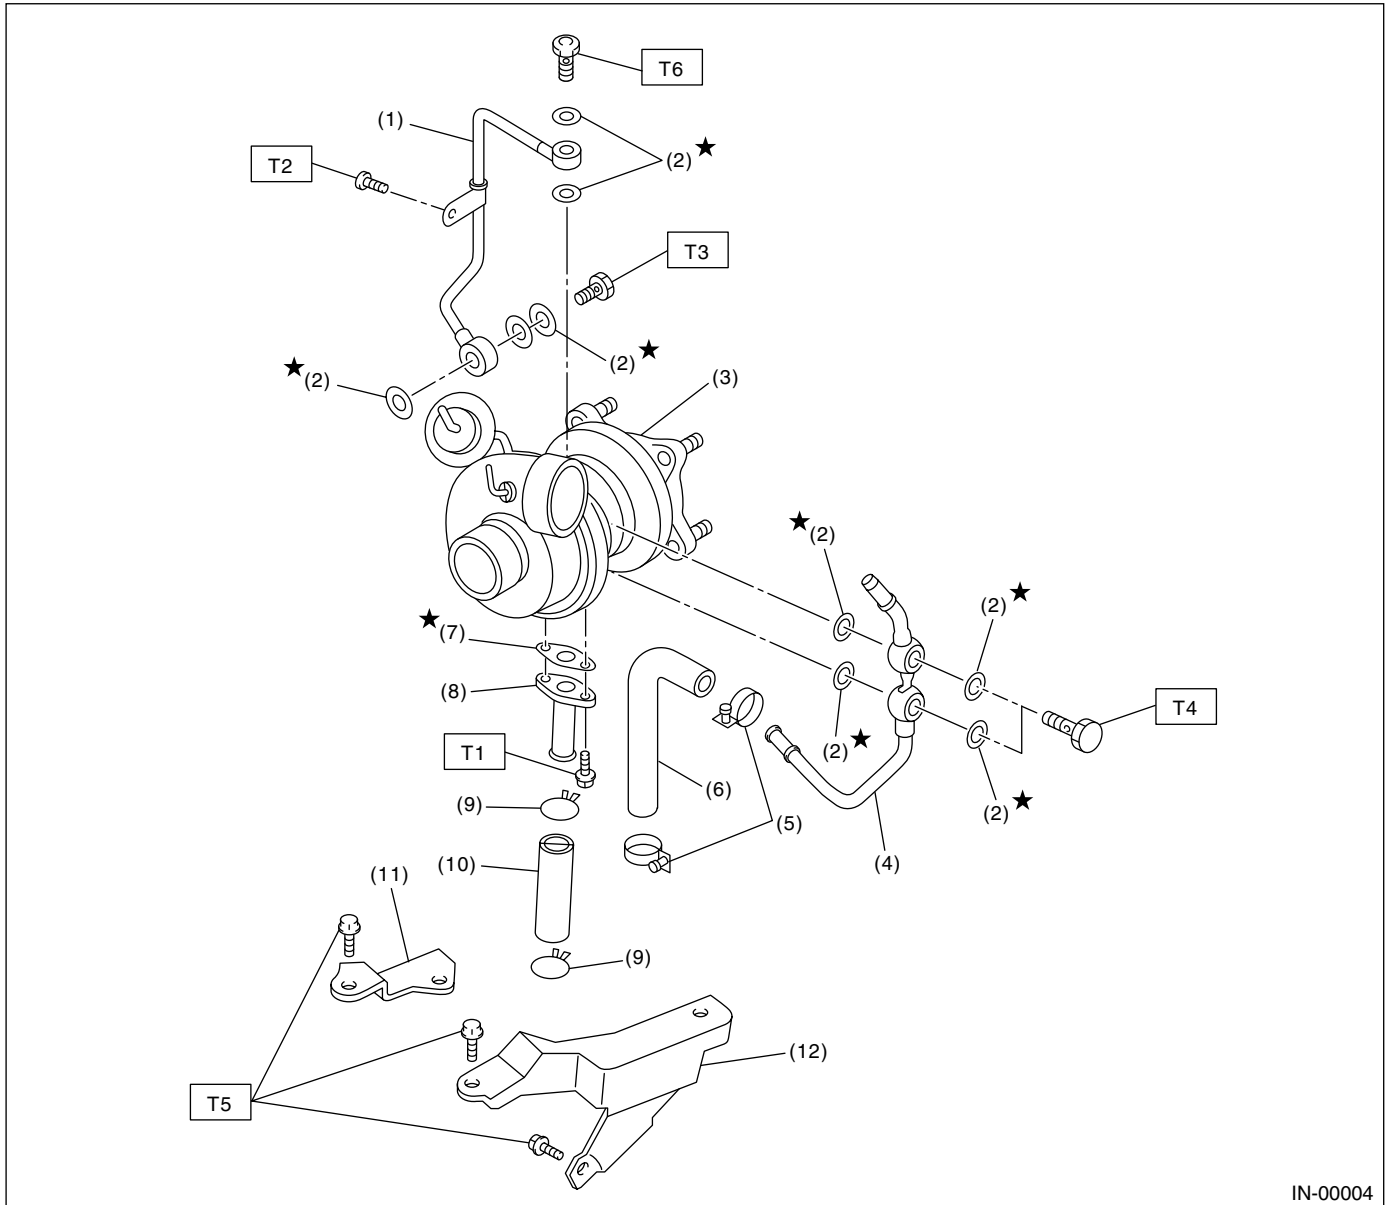

IN-00004

- | | |
|-------------------------|------------------------------|
| (1) Oil inlet pipe | (8) Oil outlet pipe |
| (2) Metal gasket | (9) Clip |
| (3) Turbocharger | (10) Oil outlet hose |
| (4) Water pipe | (11) Turbocharger bracket RH |
| (5) Clamp | (12) Turbocharger bracket LH |
| (6) Engine coolant hose | |
| (7) Gasket | |

Tightening torque: N·m (kgf·m, ft·lb)

- | | |
|------------|------------------------|
| T1: | 4.4 (0.45, 3.3) |
| T2: | 4.9 (0.50, 3.6) |
| T3: | 29 (3.0, 21.7) |
| T4: | 33 (3.4, 24.6) |
| T5: | 33 (3.4, 24.6) |
| T6: | 16 (1.6, 11.6) |

GENERAL DESCRIPTION

INTAKE (INDUCTION)


B: CAUTION

- Wear working clothing, including a cap, protective goggles, and protective shoes during operation.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust or dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly, and replacement.
- Be careful not to burn your hands, because each part on the vehicle is hot after running.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or safety stands at the specified points.
- Before disconnecting electrical connectors of sensor or units, be sure to disconnect the ground cable from battery.


2. Air Cleaner

A: REMOVAL

1) Disconnect the ground cable from battery.

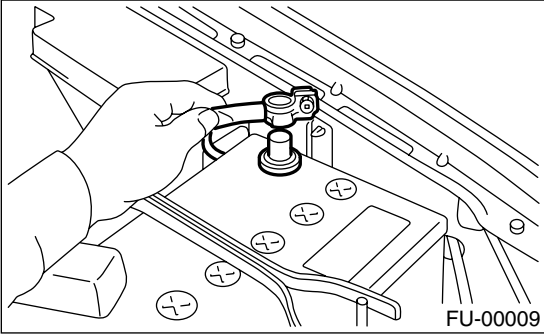


2) Disconnect the connector from mass air flow sensor.

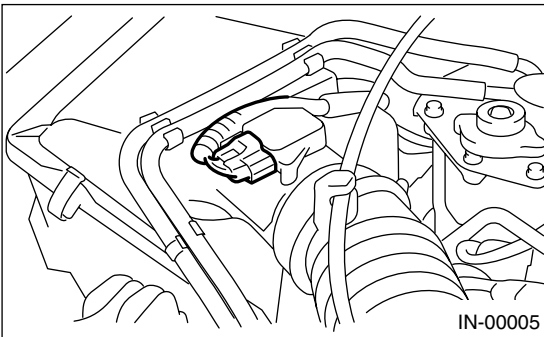

3) Loosen the clamp (A) which connects the air intake boot and intake duct.


4) Remove the clip (B) from air cleaner upper cover.

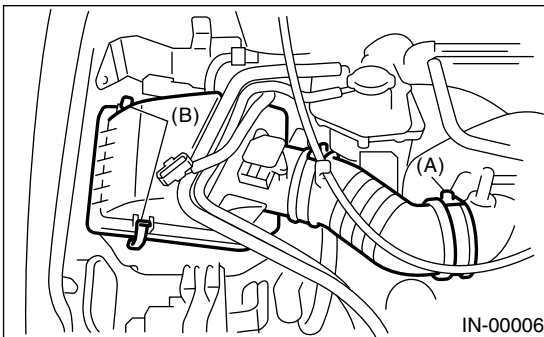

5) Remove the air cleaner upper cover.

6) Remove the air cleaner element.

7) Remove the air cleaner lower case.

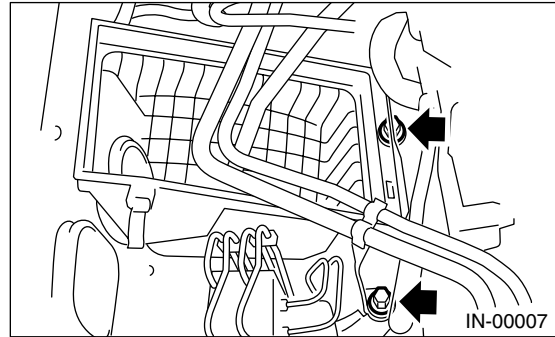


B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

33 N·m (3.4 kgf·m, 24.6 ft·lb)

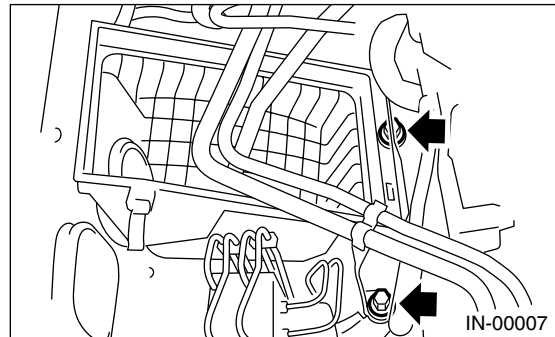

NOTE:

Before installing the air cleaner upper cover, align the holes with protruding portions of air cleaner lower case, then secure the upper cover to the lower case.

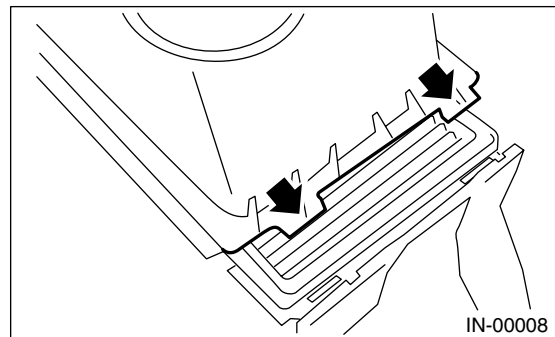

C: INSPECTION

Replace it if excessively damaged or dirty.


AIR INTAKE DUCT

INTAKE (INDUCTION)

3. Air Intake Duct

A: REMOVAL

Remove the bolts which install the air intake duct on front side of body.

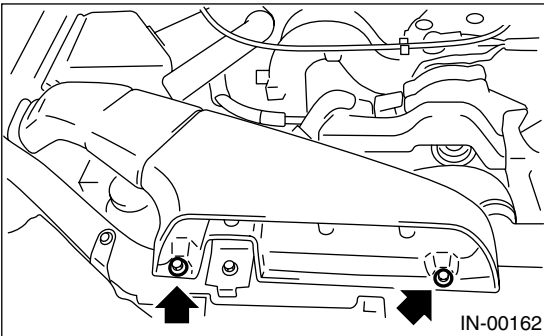


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

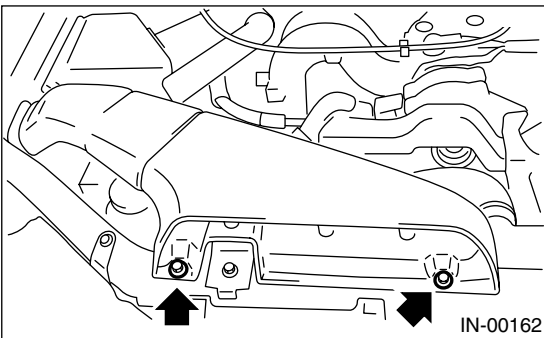


C: INSPECTION

- 1) Inspect for cracks and loose connections.
- 2) Inspect that no foreign objects are mixed in air intake duct.

4. Intake Duct

A: REMOVAL

1) Disconnect the ground cable from battery.

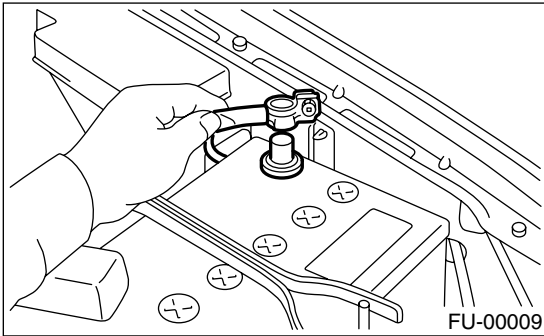


2) Remove the intake manifold.

<Ref. to FU(H4DOTC)-15, REMOVAL, Intake Manifold.>

3) Remove the sensor, engine harness and fuel pipe attached to intake manifold.

<Ref. to FU(H4DOTC)-20, DISASSEMBLY, Intake Manifold.>

4) Remove the intake duct from intake manifold.

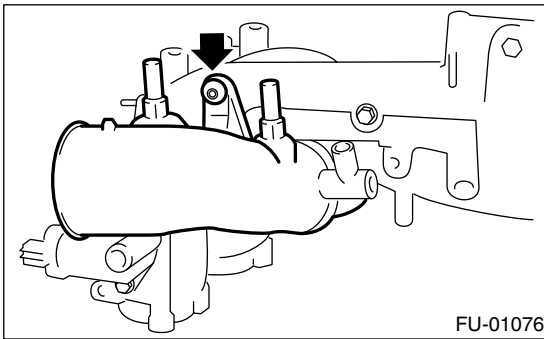


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

19 N·m (1.9 kgf-m, 13.7 ft-lb)

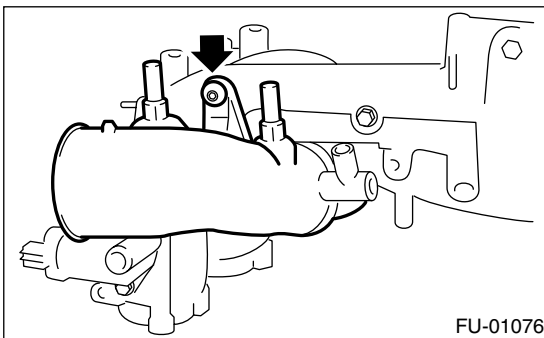


INTERCOOLER

INTAKE (INDUCTION)


5. Intercooler

A: REMOVAL


1) Disconnect PCV hose from PCV pipe.

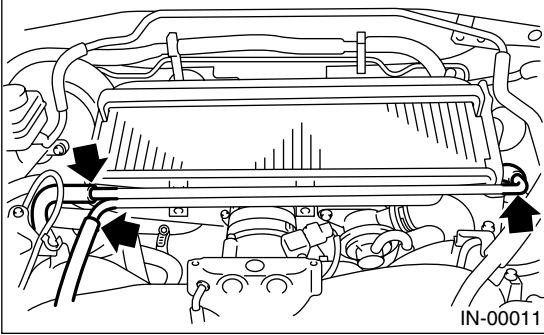



2) Remove PCV pipe from intercooler.

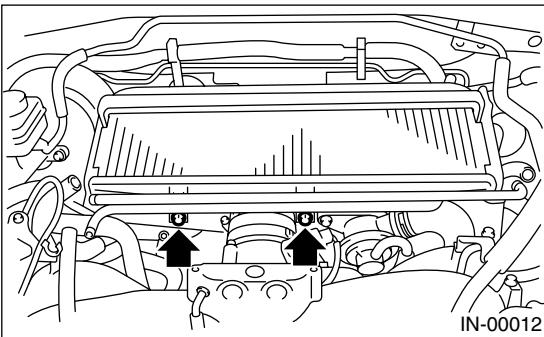

3) Disconnect hose from air bypass valve.

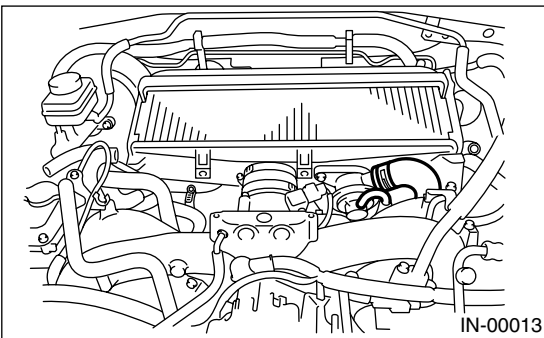


4) Remove bolt which secure intercooler to bracket.

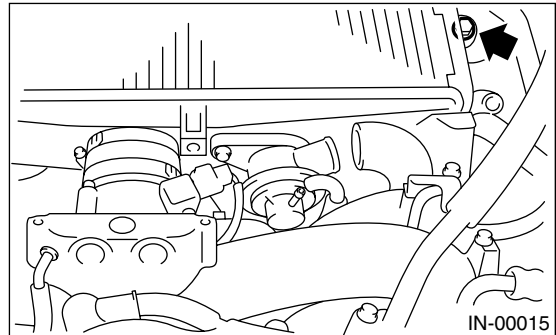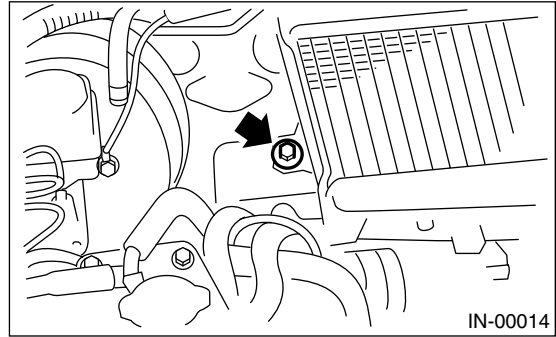

5) Loosen clamp (A) which connects turbocharger and intercooler duct.

6) Loosen clamp (B) which connects throttle body and intercooler.

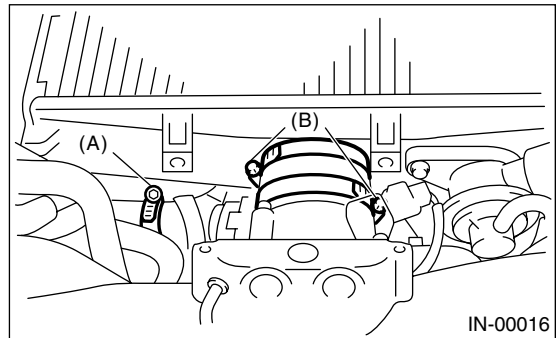

7) Disconnect intercooler duct from turbocharger.



8) Remove intercooler from throttle body.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

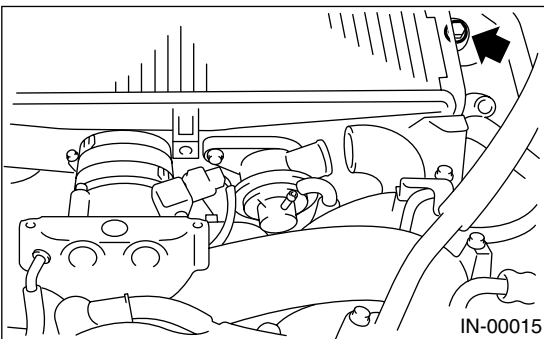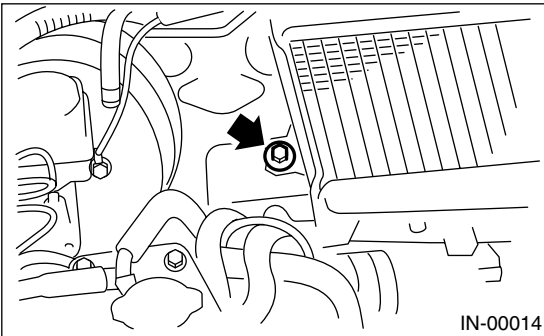


C: DISASSEMBLY


1) Remove air bypass valve from intercooler.



2) Remove intercooler duct from intercooler.

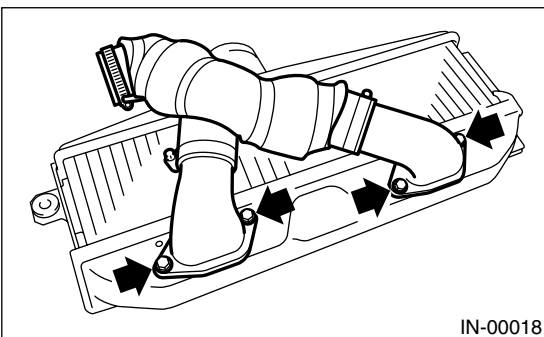

3) Separate duct.

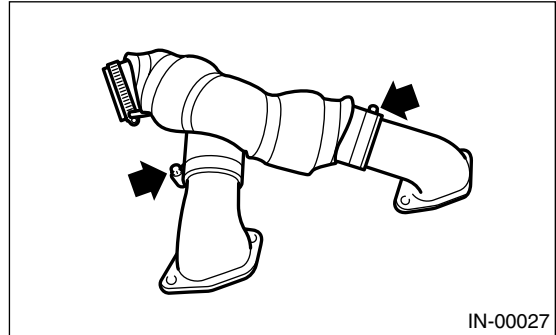

D: ASSEMBLY


To assemble, reverse order of disassembly.

NOTE:

Be careful pinching of O-ring.

Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

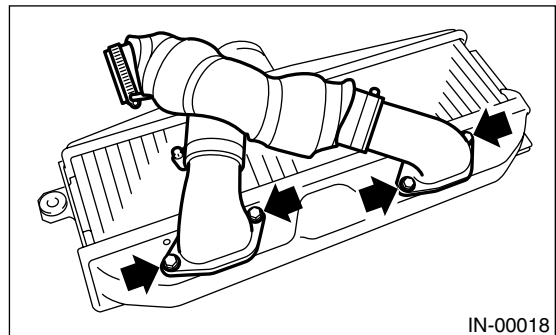


TURBOCHARGER

INTAKE (INDUCTION)


6. Turbocharger

A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

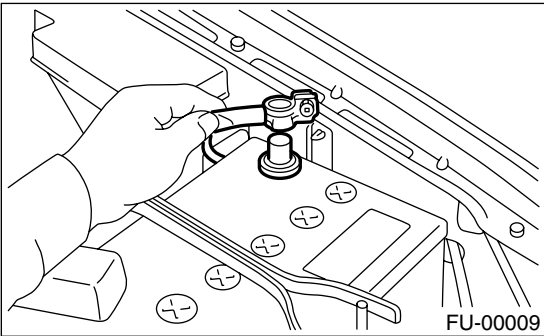


- 3) Remove the center exhaust pipe.
<Ref. to EX(H4DOTC)-9, REMOVAL, Center Exhaust Pipe.>
- 4) Lower the vehicle.
- 5) Separate the turbocharger joint pipe from turbocharger.

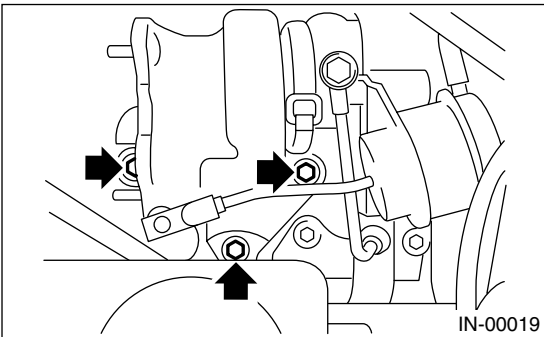


- 6) Disconnect the engine coolant hose which is connected to coolant filler tank.

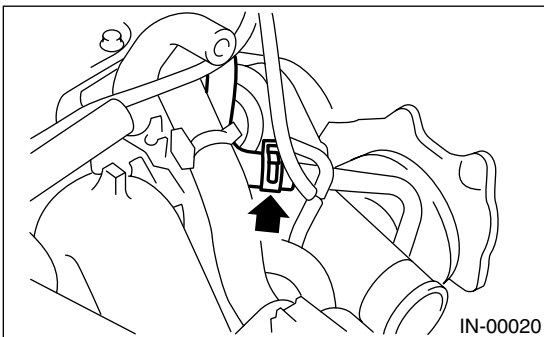


- 7) Loosen the clamp which secures the turbocharger to intake duct.

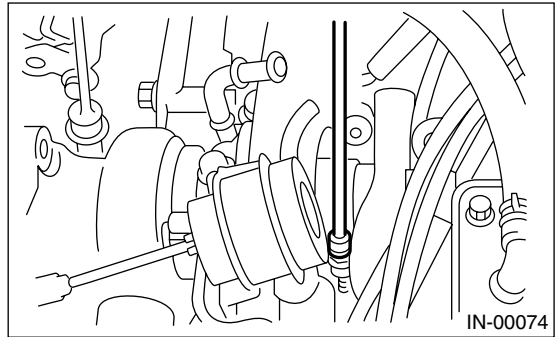


- 8) Remove the bolt which secures the bracket of oil pipe to turbocharger.
- 9) Remove the oil pipe from turbocharger.

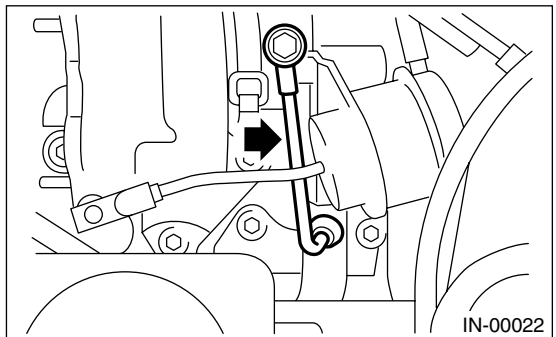

- 10) Disconnect the engine coolant hose.
- 11) Remove the turbocharger bracket.

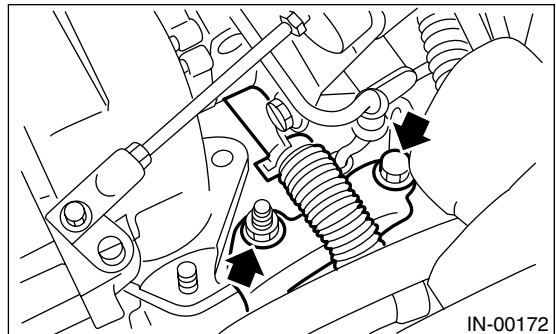


- 12) Disconnect the oil outlet hose from pipe.

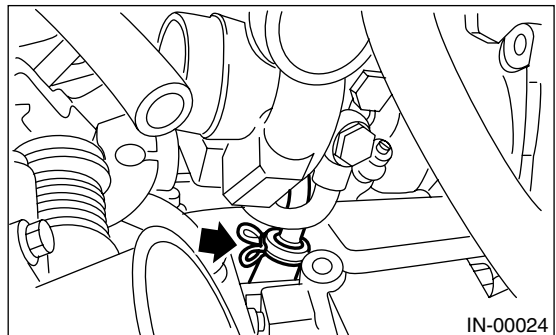

- 13) Take out the turbocharger from engine compartment.

B: INSTALLATION


- 1) Connect the oil outlet hose to outlet pipe.

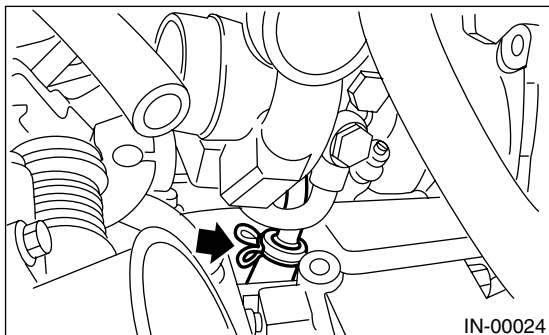

- 2) Install the turbocharger to intake duct.

Tightening torque:


3 N·m (0.3 kgf-m, 2.2 ft-lb)

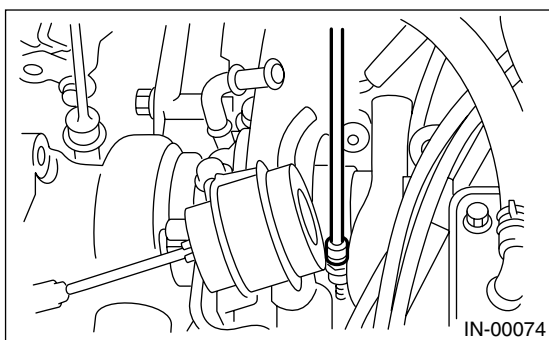

- 3) Install the oil pipe to turbocharger.

Tightening torque:

16 N·m (1.6 kgf-m, 11.6 ft-lb)

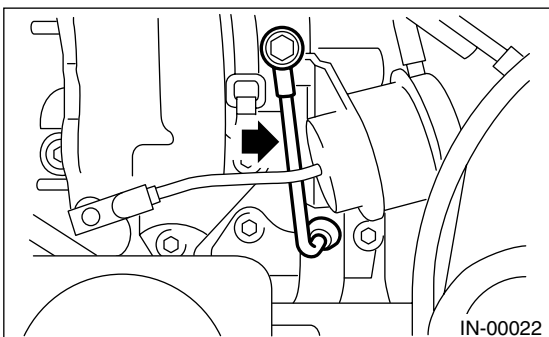


- 4) Install the joint pipe to turbocharger.

NOTE:

Replace the gasket with a new one.

Tightening torque:

35 N·m (3.6 kgf-m, 25.8 ft-lb)

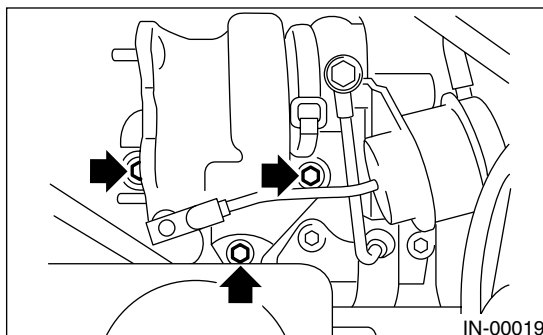


- 5) Connect the engine coolant hose.


- 6) Install the turbocharger bracket.

Tightening torque:

33 N·m (3.4 kgf-m, 24.6 ft-lb)

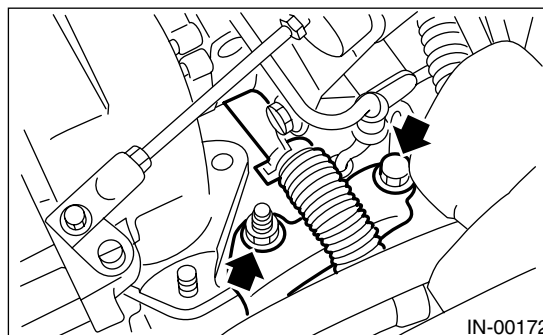

- 7) Connect the engine coolant hose which is connected to coolant filler tank.

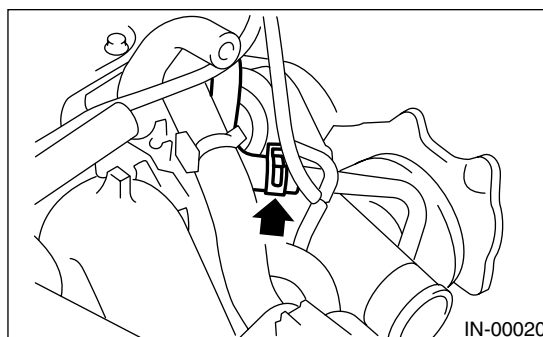

- 8) Lift-up the vehicle.


- 9) Install the center exhaust pipe.

<Ref. to EX(H4DOTC)-10, INSTALLATION, Center Exhaust Pipe.>

7. Air Bypass Valve

A: REMOVAL

1) Disconnect air bypass hose from air bypass valve.

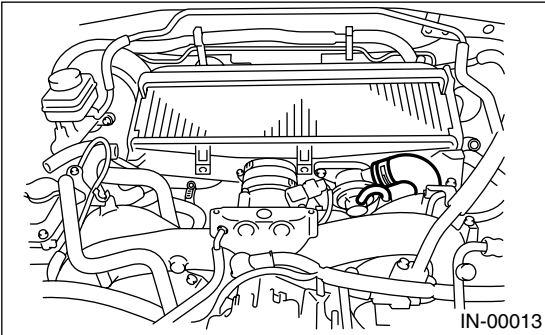

2) Remove air bypass valve from intercooler.



B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Be careful pinching of O-ring.

Tightening torque:


16 N·m (1.6 kgf-m, 11.6 ft-lb)

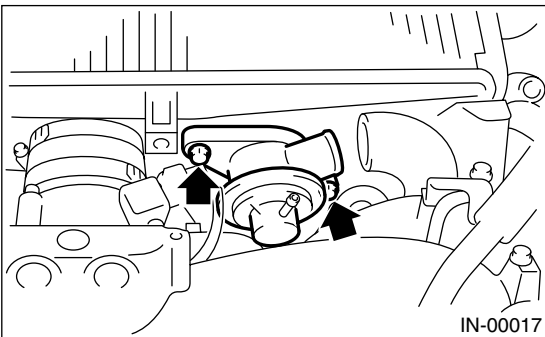


8. Resonator Chamber

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Remove the air intake duct. <Ref. to IN(H4DOTC)-8, REMOVAL, Air Intake Duct.>
- 3) Remove the air cleaner lower case. <Ref. to IN(H4DOTC)-7, REMOVAL, Air Cleaner.>
- 4) Remove the resonator chamber mounting bolt on right side of engine compartment.

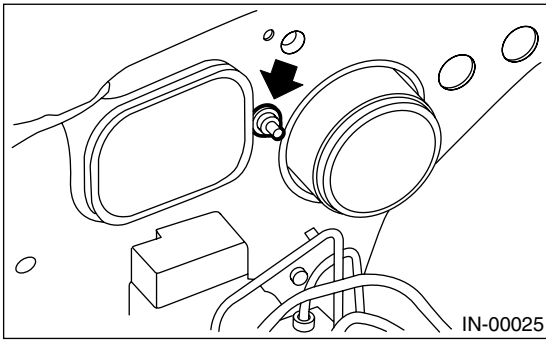

- 5) Remove the front right tire, and lift up the vehicle.
- 6) Remove the front mudguard RH.
- 7) Remove the resonator chamber from the inside front fender.


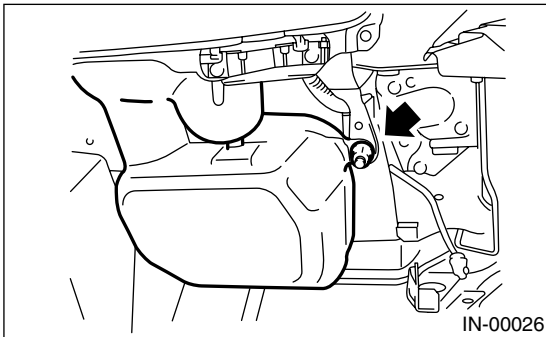


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

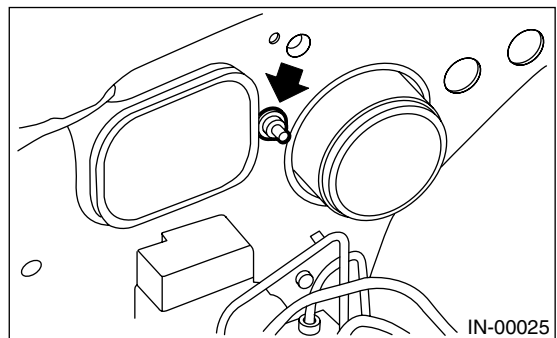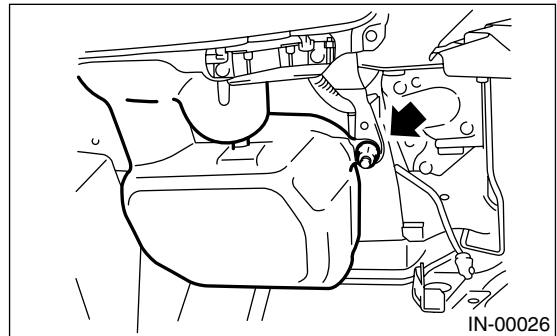

C: INSPECTION

Inspect for cracks and loose connections. Check that no foreign objects are mixed in resonator chamber.

RESONATOR CHAMBER

INTAKE (INDUCTION)

MEMO: