



23. Tire Rotation

A: INSPECTION

1) When the tread has worn down to 1.6 mm (2/32 in) or the wear indicator appears across the tread, replace the tire. (Replace the right and left tire as a set.)

2) If the tire appears to be worn unevenly, adjust the wheel alignment.

3) Next, make a tire rotation between front and rear as shown in the figure, make sure tires are worn evenly.

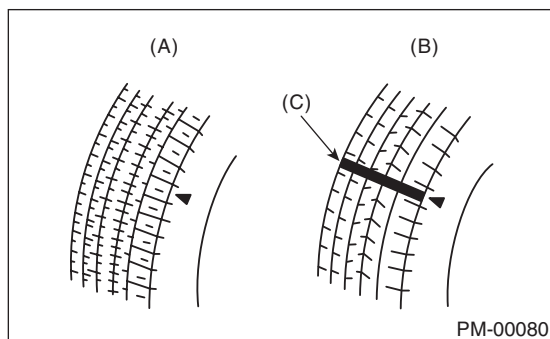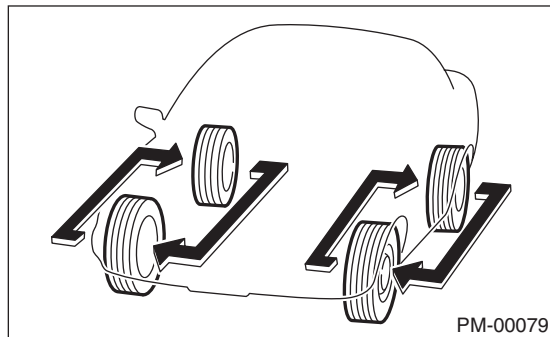

- (A) New tread
- (B) Damaged tread
- (C) Tread wear indicator

4) Re-register the transmitter ID when rotation was performed. (3.0 L U4 model) <Ref. to TPM(diag)-9, REGISTER TRANSMITTER ID, OPERATION, Subaru Select Monitor.>