


25. Supplemental Restraint System

A: INSPECTION

Check the airbag system according to the results of the self-diagnosis. <Ref. to AB(diag)-2, Basic Diagnostic Procedure.>

1) Make sure that airbag connectors are connected. If not, properly connect. When the ignition switch is turned to ON with the connector(s) disconnected, the airbag warning light blinks to identify the fault.

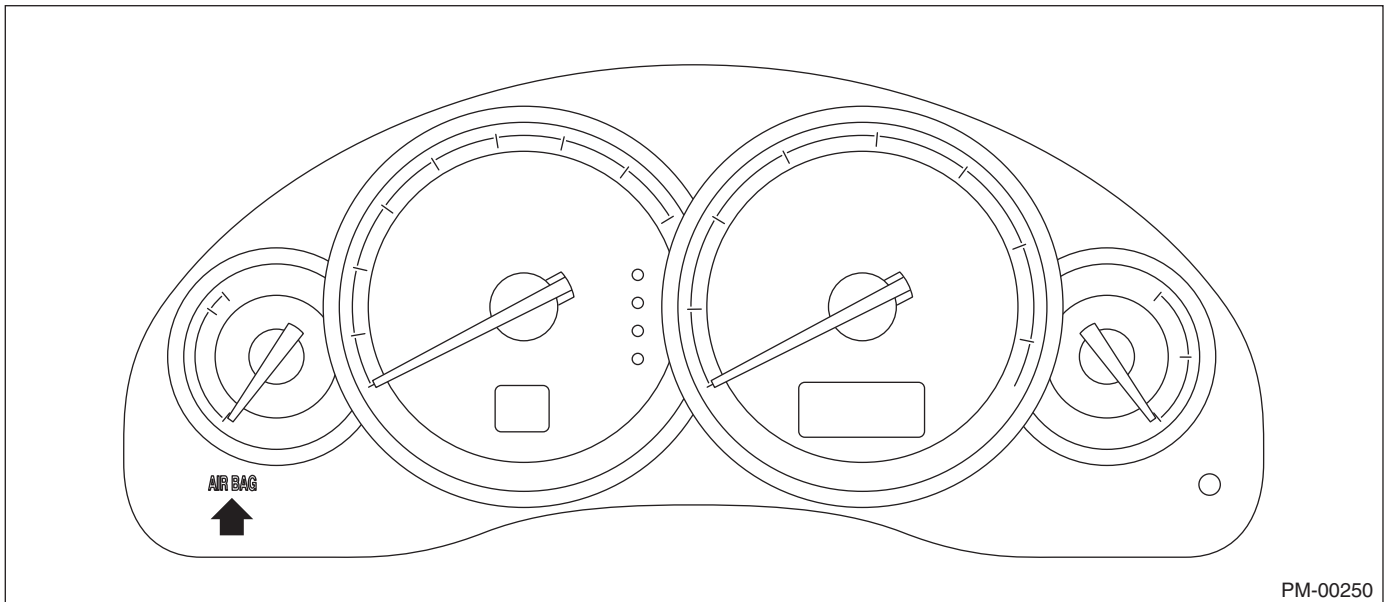

2) Connect the Subaru Select Monitor to data link connector. Turn the ignition switch to ON, and Subaru Select Monitor switch to ON.

3) Read the Diagnostic Trouble Code (DTC) using Subaru Select Monitor. <Ref. to ABS(diag)-15, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>

4) Inspect the airbag system according to the Diagnostic Trouble Code (DTC).

Supplemental Restraint System

PERIODIC MAINTENANCE SERVICES

ENGINE SECTION 1

This service manual has been prepared to provide SUBARU service personnel with the necessary information and data for the correct maintenance and repair of SUBARU vehicles.

This manual includes the procedures for maintenance, disassembling, reassembling, inspection and adjustment of components and diagnostics for guidance of experienced mechanics.

Please peruse and utilize this manual fully to ensure complete repair work for satisfying our customers by keeping their vehicle in optimum condition. When replacement of parts during repair work is needed, be sure to use SUBARU genuine parts.

All information, illustration and specifications contained in this manual are based on the latest product information available at the time of publication approval.

FUEL INJECTION (FUEL SYSTEMS) FU(H4SO)

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES) EC(H4SO)

INTAKE (INDUCTION) IN(H4SO)

MECHANICAL ME(H4SO)

EXHAUST EX(H4SO)

COOLING CO(H4SO)

LUBRICATION LU(H4SO)

SPEED CONTROL SYSTEMS SP(H4SO)

IGNITION IG(H4SO)

STARTING/CHARGING SYSTEMS SC(H4SO)

ENGINE (DIAGNOSTICS) EN(H4SO)(diag)

GENERAL DESCRIPTION GD(H4SO)

FUEL INJECTION (FUEL SYSTEMS)

FU(H4SO)

	Page
1. General Description	2
2. Throttle Body	10
3. Intake Manifold	11
4. Engine Coolant Temperature Sensor	19
5. Crankshaft Position Sensor	20
6. Camshaft Position Sensor	21
7. Knock Sensor	22
8. Throttle Position Sensor	23
9. Manifold Absolute Pressure Sensor	24
10. Mass Air Flow and Intake Air Temperature Sensor	25
11. EGR Valve	26
12. Fuel Injector	27
13. Variable Valve Lift Diagnosis Oil Pressure Switch	30
14. Oil Temperature Sensor	31
15. Front Oxygen (A/F) Sensor	32
16. Rear Oxygen Sensor	34
17. Engine Control Module (ECM)	36
18. Main Relay	37
19. Fuel Pump Relay	38
20. Electronic Throttle Control Relay	39
21. Fuel	40
22. Fuel Tank	41
23. Fuel Filler Pipe	47
24. Fuel Pump	50
25. Fuel Level Sensor	52
26. Fuel Sub Level Sensor	53
27. Fuel Filter	54
28. Fuel Damper Valve	55
29. Fuel Delivery and Evaporation Lines	56
30. Fuel System Trouble in General	59