


## 10. Reservoir Tank

### A: REMOVAL

- 1) Disconnect the over flow hose.
- 2) Push in the hook (A), and pull the reserve tank in the direction of the arrow to remove.

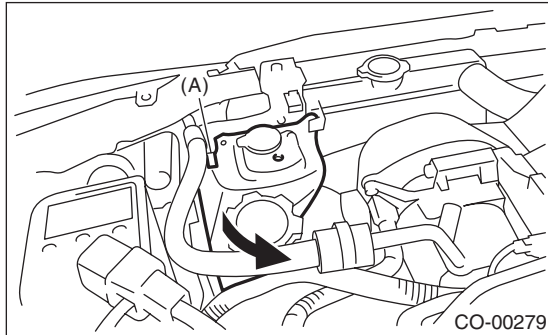

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Make sure the engine coolant level is between "FULL" and "LOW".