## 11. Engine Cooling System Trouble in General

## A: INSPECTION

Trouble	Possible cause	Corrective action
Overheat	a. Insufficient engine coolant	Replenish engine coolant, inspect for leakage, and repair it if necessary.
	b. Loose timing belt	Repair or replace timing belt tensioner.
	c. Oil on timing belt	Replace.
	d. Malfunction of thermostat	Replace.
	e. Malfunction of water pump	Replace.
	f. Clogged engine coolant passage	Clean.
	g. Improper ignition timing	Inspect and repair ignition control system. <ref. basic="" diagnostic="" en(h4so)(diag)-2,="" procedure.="" to=""></ref.>
	h. Clogged or leaking radiator	Clean, repair or replace.
	i. Engine oil mixed in engine coolant	Replace the engine coolant.
	j. Air/fuel mixture ratio too lean	Inspect and repair the fuel injection system. <ref. basic="" diagnostic="" en(h4so)(diag)-2,="" procedure.="" to=""></ref.>
	k. Excessive back pressure in exhaust system	Clean or replace.
	I. Insufficient clearance between piston and cylinder	Adjust or replace.
	m. Slipping clutch	Correct or replace.
	n. Dragging brake	Adjust.
	o. Defective radiator fan	Inspect the radiator fan relay, engine coolant temperature sensor or fan motor and replace them.
Over cooling	b. Loose timing belt c. Oil on timing belt d. Malfunction of thermostat e. Malfunction of water pump f. Clogged engine coolant passage g. Improper ignition timing h. Clogged or leaking radiator i. Engine oil mixed in engine coolant j. Air/fuel mixture ratio too lean k. Excessive back pressure in exhaust system l. Insufficient clearance between piston and cylinder m. Slipping clutch n. Dragging brake o. Defective radiator fan a. Ambient temperature extremely low b. Defective thermostat a. Loosened or damaged connecting units on hoses b. Leakage from water pump c. Leakage from water pipe d. Leakage around cylinder head gasket e. Cylinder head and block damaged or cracked f. Damaged or cracked thermostat case g. Leakage from radiator a. Timing belt problem b. Defective radiator fan	Partly cover radiator front area.
Over-cooling	b. Defective thermostat	Replace.
	a. Loosened or damaged connecting units on hoses	Correct or replace.
Engine coolant leaks	b. Leakage from water pump	Replace.
	c. Leakage from water pipe	Correct or replace.
	d. Leakage around cylinder head gasket	Retighten the cylinder head bolts or replace the gasket.
	,	Correct or replace.
	f. Damaged or cracked thermostat case	Correct or replace.
	g. Leakage from radiator	Correct or replace.
Abnormal noise	•	Replace.
		Replace.
		Replace water pump.
	d. Defective water pump mechanical seal	Replace water pump.

## **LUBRICATION**

## LU(H4SO)

		Page
1.	General Description	2
	Oil Pressure System	
	Engine Oil	
	Oil Pump	
5.	Oil Pan and Strainer	15
6.	Oil Pressure Switch	18
7.	Engine Oil Filter	19
8.	Engine Lubrication System Trouble in General	20