



9. Radiator Sub Fan and Fan Motor

A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

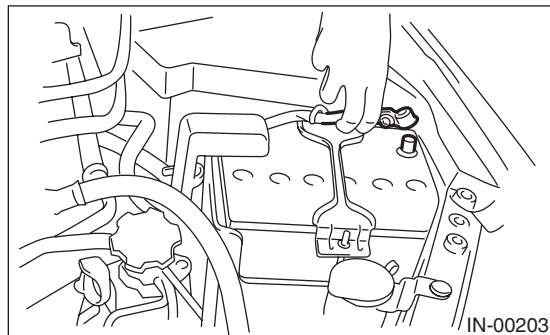

- 3) Lift-up the vehicle.
- 4) Remove the under cover.
- 5) Remove the radiator under cover.
- 6) Remove the connector (B) of sub fan motor.

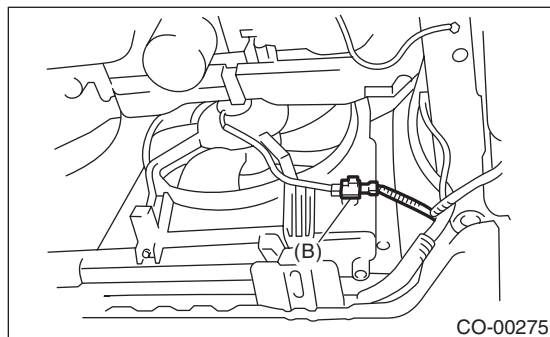

- 7) Remove the ATF hose from the clip of the radiator sub fan motor assembly. (AT model)
- 8) Lower the vehicle.
- 9) Remove the air intake duct. <Ref. to IN(H4SO)-8, REMOVAL, Air Intake Duct.>
- 10) Remove the bolts which hold the radiator sub fan shroud to the radiator.

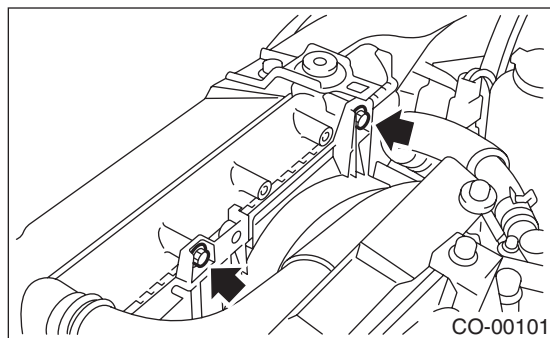


- 11) Remove the radiator sub fan motor assembly from underneath the vehicle.

B: INSTALLATION

Install in the reverse order of removal.


Tightening torque:

7.5 N-m (0.76 kgf-m, 5.5 ft-lb)

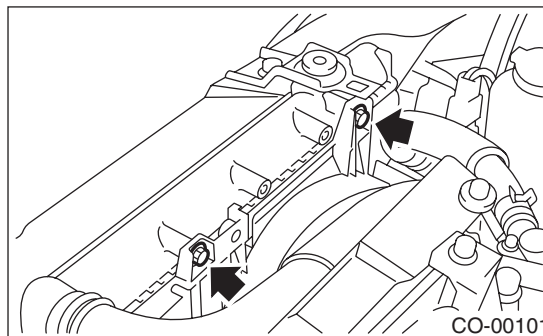


C: DISASSEMBLY

- 1) Remove the clip which holds the fan motor connector to the shroud.
- 2) Remove the nut which holds fan to fan motor and shroud assembly.

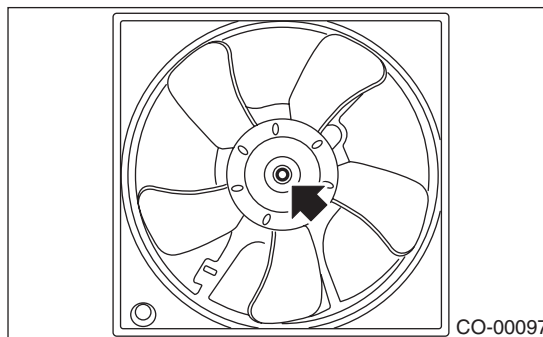

- 3) Remove the bolts which hold fan motor onto shroud.

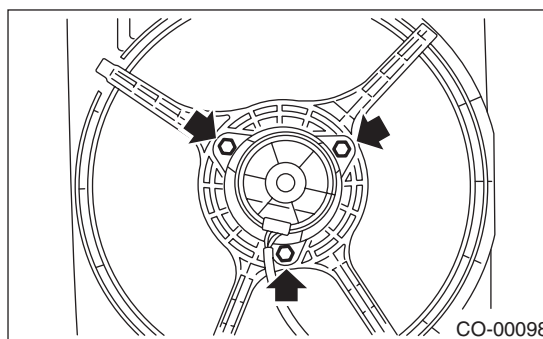

Radiator Sub Fan and Fan Motor


COOLING

D: ASSEMBLY

Assemble in the reverse order of disassembly.

Tightening torque:

5 N·m (0.5 kgf-m, 3.6 ft-lb)

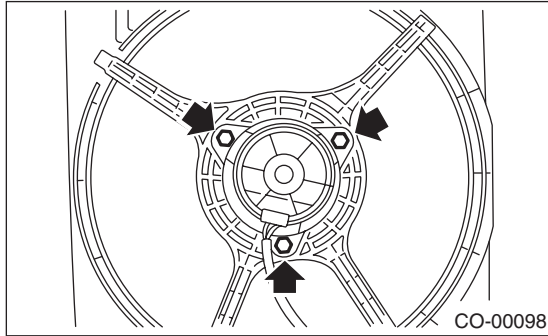

Tightening torque:

3.4 N·m (0.35 kgf-m, 2.5 ft-lb)

