

# Fuel Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 7. Fuel Level Sensor

### A: REMOVAL

Refer to the "FU" section for the removal procedures. <Ref. to FU(H4SO)-52, REMOVAL, Fuel Level Sensor.>

### B: INSTALLATION

Refer to the "FU" section for the installation procedures. <Ref. to FU(H4SO)-52, INSTALLATION, Fuel Level Sensor.>