

# Fuel Temperature Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

## 8. Fuel Temperature Sensor

### A: REMOVAL

The fuel temperature sensor is integrated into the fuel level sensor as a single unit; therefore, refer to "Fuel Level Sensor" for removal procedures. <Ref. to FU(H4SO)-52, REMOVAL, Fuel Level Sensor.>

### B: INSTALLATION

The fuel temperature sensor and fuel level sensor are integrated into a single unit; therefore, refer to "Fuel Level Sensor" for installation procedures. <Ref. to FU(H4SO)-52, INSTALLATION, Fuel Level Sensor.>