

## Fuel Sub Level Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### 9. Fuel Sub Level Sensor

#### A: REMOVAL

Refer to the "FU" section for the removal procedures. <Ref. to FU(H4SO)-53, REMOVAL, Fuel Sub Level Sensor.>

#### B: INSTALLATION

Refer to the "FU" section for the installation procedures. <Ref. to FU(H4SO)-53, INSTALLATION, Fuel Sub Level Sensor.>