## 1. Basic Diagnostic Procedure

## A: PROCEDURE

## 1. ENGINE

	Step	Check	Yes	No
1	CHECK ENGINE START FAILURE.  1) Ask the customer when and how the trouble occurred using the interview check list. <ref. check="" check,="" en(h4so)(diag)-3,="" for="" interview.="" list="" to=""> 2) Start the engine.</ref.>	Does the engine start?	Go to step 2.	Inspection using "Diagnostics for Engine Start Fail- ure". <ref. 55,="" diagnostics="" en(h4so)(diag)-="" engine="" failure.="" for="" starting="" to=""></ref.>
2	CHECK ILLUMINATION OF MALFUNCTION INDICATOR LIGHT.	Does the malfunction indicator light illuminate?	Go to step 3.	Inspection using "General Diagnos- tic Table". <ref. to<br="">EN(H4SO)(diag)- 315, INSPEC- TION, General Diagnostic Table.&gt;</ref.>
3	CHECK INDICATION OF DTC ON DISPLAY.  1) Turn the ignition switch to OFF.  2) Connect the Subaru Select Monitor or general scan tool to data link connector.  3) Turn the ignition switch to ON.  4) Read DTC using Subaru Select Monitor or general scan tool.  NOTE:  • Subaru Select Monitor  Refer to "Read Diagnostic Trouble Code" for detailed operation procedure. <ref. (dtc).="" code="" diagnostic="" en(h4so)(diag)-33,="" read="" to="" trouble="">  • For detailed operation procedure, refer to the general scan tool operation manual.</ref.>		Record the DTC. Repair the trouble cause. <ref. (dtc).="" 70,="" code="" diag-="" en(h4so)(diag)-="" list="" nostic="" of="" to="" trouble=""> Go to step 4.</ref.>	Repair the related parts.  NOTE: If DTC is not shown on display although the malfunction indicator light illuminates, perform the diagnosis of malfunction indicator light circuit or combination meter. <ref. en(h4so)(diag)-46,="" indicator="" light.="" malfunction="" to=""></ref.>
4	PERFORM DIAGNOSIS.  1) Perform the Clear Memory Mode. <ref. clear="" en(h4so)(diag)-43,="" memory="" mode.="" to=""> 2) Perform the Inspection Mode. <ref. en(h4so)(diag)-34,="" inspection="" mode.="" to=""></ref.></ref.>	Is DTC displayed on the Sub- aru Select Monitor?	Inspect using "Diagnostic Procedure with Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" en(h4so)(diag)-76,="" procedure="" to="" trouble="" with=""></ref.>	Finish the diagnosis.