

## 3. Center Exhaust Pipe

### A: REMOVAL

1) After removing the center and front exhaust pipes as one unit, separate them. Refer to “Front Exhaust Pipe” for the removal procedure. <Ref. to EX(H4SO)-4, REMOVAL, Front Exhaust Pipe.>

2) Remove the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H4SO)-32, REMOVAL, Front Oxygen (A/F) Sensor.> <Ref. to FU(H4SO)-34, REMOVAL, Rear Oxygen Sensor.>

### B: INSTALLATION

1) Install the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H4SO)-32, INSTALLATION, Front Oxygen (A/F) Sensor.> <Ref. to FU(H4SO)-34, INSTALLATION, Rear Oxygen Sensor.>

2) Install the center exhaust pipe and front exhaust pipe as one unit. Refer to “Front Exhaust Pipe” for the installation procedure. <Ref. to EX(H4SO)-5, INSTALLATION, Front Exhaust Pipe.>

### C: INSPECTION

1) Check the connections and welds for exhaust leaks.

2) Make sure there are no holes or rusting.