


# Rear Exhaust Pipe

## EXHAUST

### 4. Rear Exhaust Pipe

#### A: REMOVAL

1) Separate the rear exhaust pipe from center exhaust pipe.

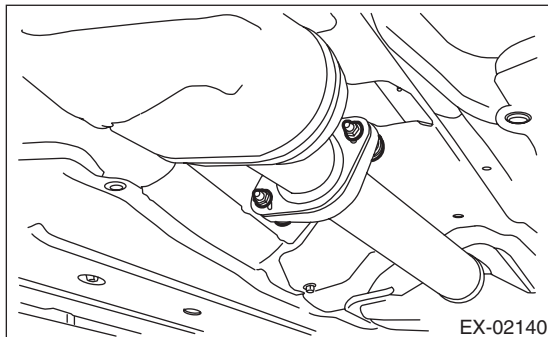


2) Separate the rear exhaust pipe from muffler.


#### CAUTION:

Be careful not to pull down the rear exhaust pipe.

- LH side

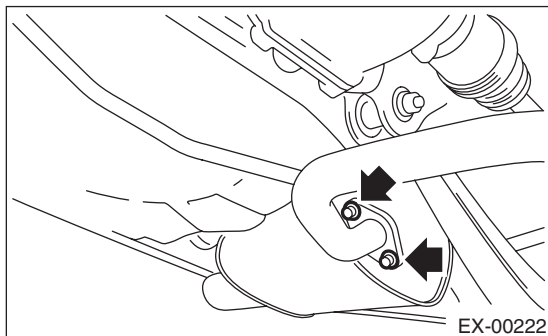


- RH side

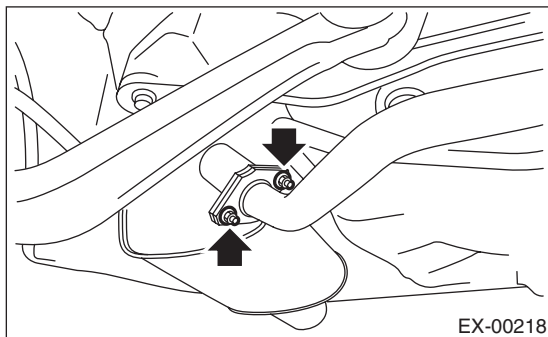

3) Apply a coat of spray type lubricant to the mating area of cushion rubber.


4) Remove the rear exhaust pipe bracket from cushion rubber.

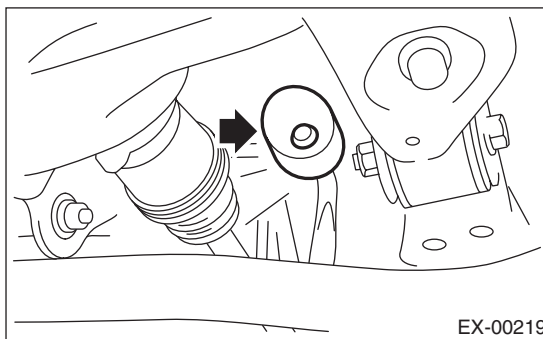

#### B: INSTALLATION

1) Apply a coat of spray type lubricant to the mating area of cushion rubber.

2) Install the rear exhaust pipe bracket to cushion rubber.

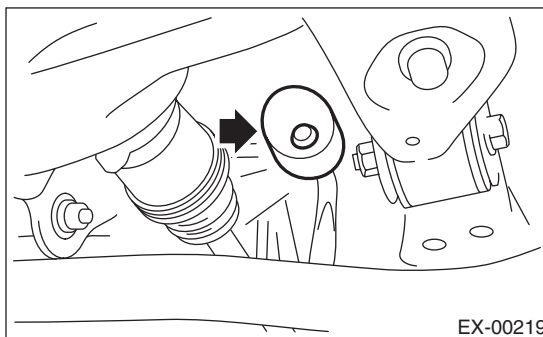

3) Install the rear exhaust pipe to muffler.


#### NOTE:

Use a new gasket and self-locking nut.


#### Tightening torque:

**48 N·m (4.9 kgf·m, 35.4 ft·lb)**

- LH side

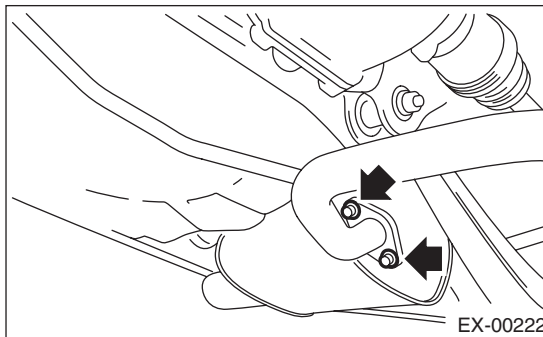


- RH side

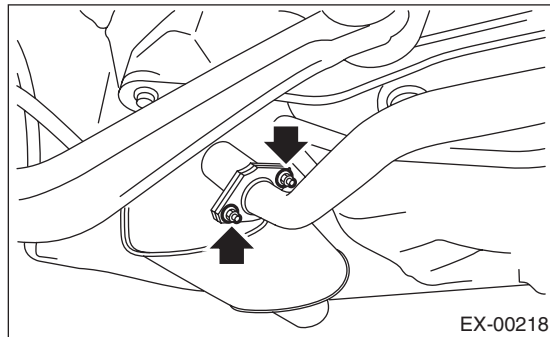

4) Install the rear exhaust pipe to center exhaust pipe.

**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.0 ft·lb)**

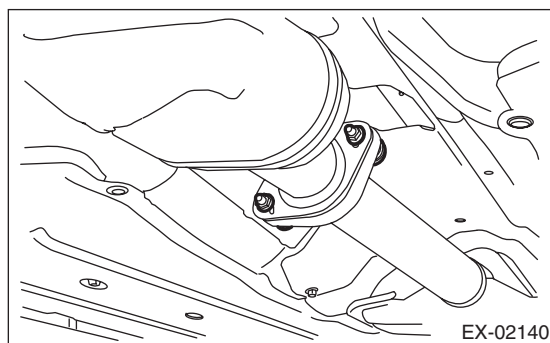

**C: INSPECTION**

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.