

Muffler


EXHAUST

5. Muffler


A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

- LH side

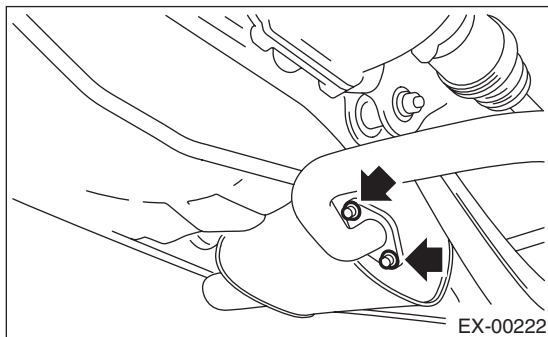


- RH side

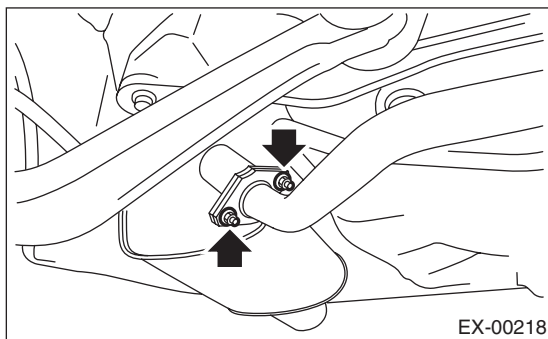


2) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- LH side

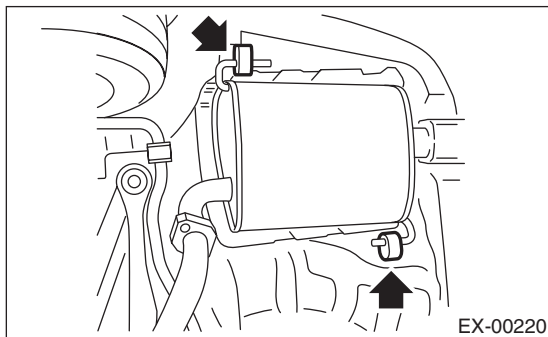

- RH side

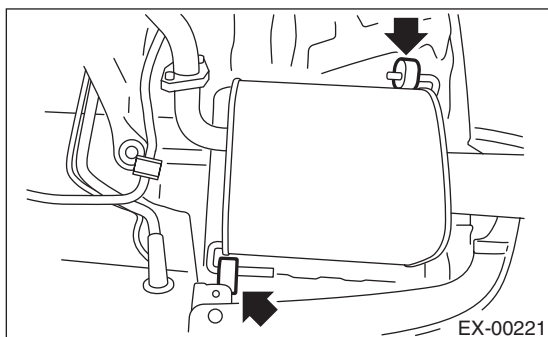

3) Remove the front and rear cushion rubbers, and then remove the muffler.

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

Use a new gasket and self-locking nut.


Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

- LH side

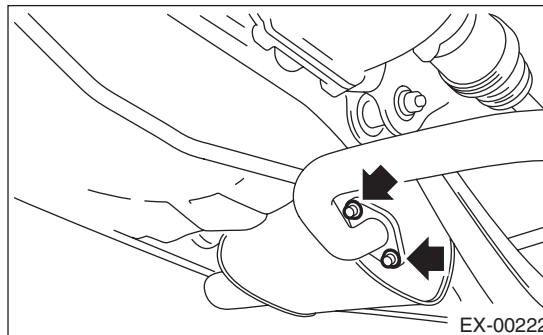

- RH side

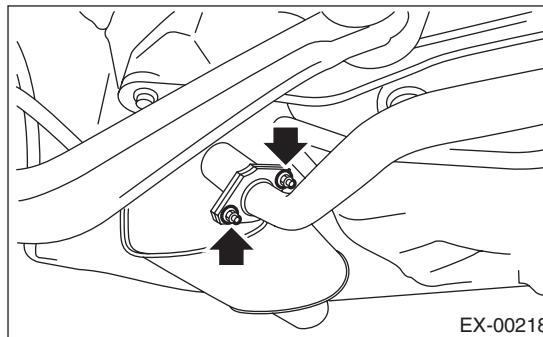

C: INSPECTION

1) Check the connections and welds for exhaust leaks.

2) Make sure there are no holes or rusting.

3) Check the cushion rubber for wear or crack.

COOLING

CO(H4SO)

	Page
1. General Description	2
2. Radiator Fan System	7
3. Engine Coolant	12
4. Water Pump	14
5. Thermostat	17
6. Radiator	19
7. Radiator Cap	22
8. Radiator Main Fan and Fan Motor	23
9. Radiator Sub Fan and Fan Motor	25
10. Reservoir Tank	27
11. Engine Cooling System Trouble in General	28