



14. Oil Temperature Sensor

A: REMOVAL

- 1) Disconnect the ground cable from the battery.

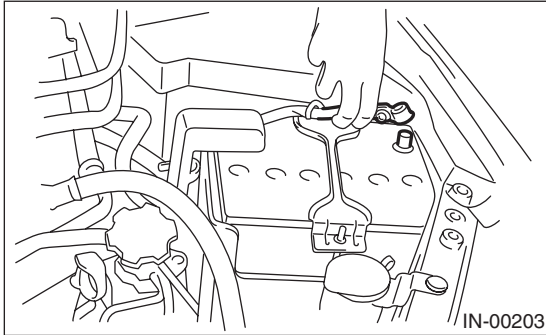

- 2) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 3) Remove the engine harness connector from the bracket.
- 4) Disconnect the connector from the oil temperature sensor.
- 5) Remove the oil temperature sensor.

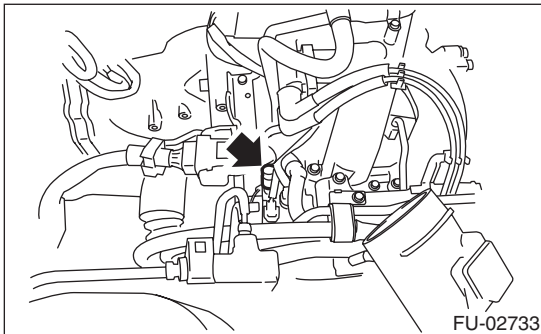

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft·lb)