


Throttle Body

FUEL INJECTION (FUEL SYSTEMS)

2. Throttle Body

A: REMOVAL

1) Disconnect the ground cable from the battery.

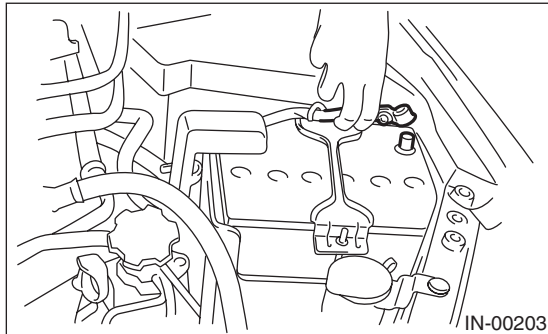


2) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>

3) Disconnect the connectors from throttle position sensor and manifold absolute pressure sensor.

4) Disconnect the engine coolant hoses from the throttle body.

5) Remove the bolts which secure the throttle body to the intake manifold.

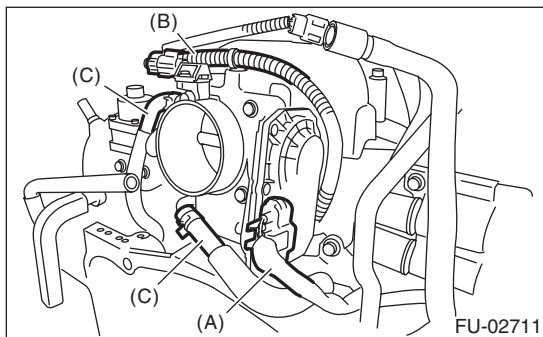

- (A) Throttle position sensor
- (B) Manifold absolute pressure sensor
- (C) Engine coolant hose

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

8 N·m (0.8 kgf·m, 5.8 ft·lb)