

Fuel Level Sensor

FUEL INJECTION (FUEL SYSTEMS)

25. Fuel Level Sensor

A: REMOVAL


WARNING:

- Place “NO FIRE” signs near the working area.
- Be careful not to spill fuel.

NOTE:

The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H4SO)-50, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.
- 3) Remove the fuel level sensor and fuel temperature sensor.

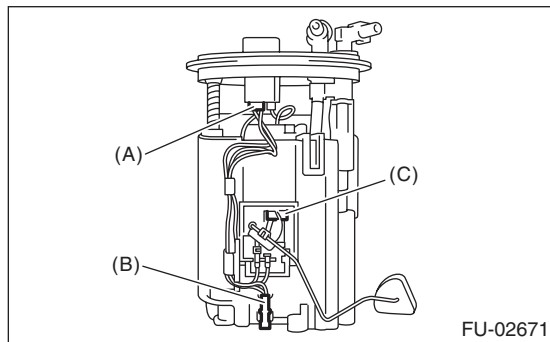

- (A) Connector
- (B) Fuel Temperature Sensor
- (C) Fuel level sensor

B: INSTALLATION

Install in the reverse order of removal.