

## 28. Fuel Damper Valve


### A: REMOVAL

1) Release the fuel pressure. <Ref. to FU(H4SO)-40, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Remove the fuel damper valve from the fuel delivery line.

### WARNING:

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

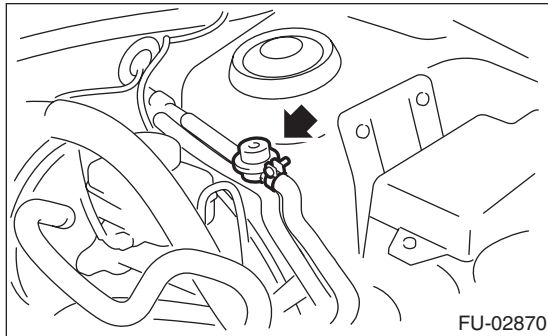

### B: INSTALLATION

Install in the reverse order of removal.

### *Tightening torque:*

***1.25 N·m (0.13 kgf-m, 0.94 ft-lb)***