


Air Cleaner Element

INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL


1) Disconnect the ground cable from the battery.

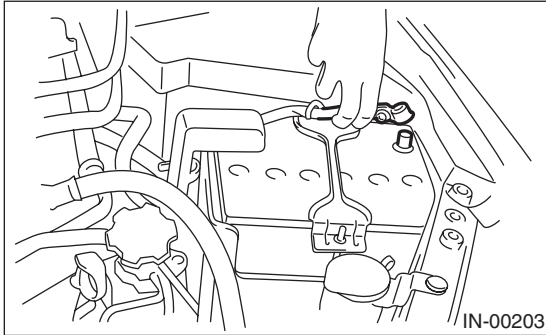

2) Disconnect the connector from mass air flow and intake air temperature sensor.

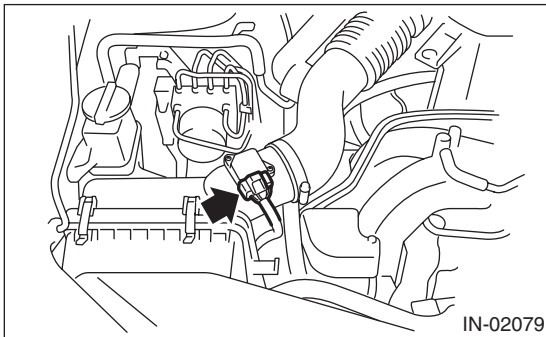

3) Remove the clip (A) securing upper side of air cleaner case.

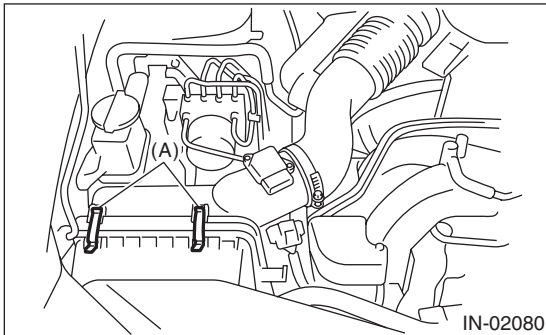

4) Pull the air cleaner case (rear) backward of the vehicle, and remove the air cleaner element.

NOTE:


Be careful of the power steering hose fixed to the bottom of the air cleaner case (rear).

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Fasten with a clip after inserting the lower tab of case.

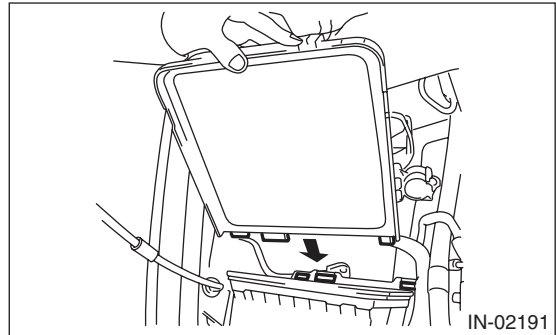

C: INSPECTION

Replace if excessively damaged or dirty.