

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for the removal procedure. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to “Air Cleaner Case” for the installation procedure. <Ref. to IN(H4SO)-6, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

Resonator Chamber

INTAKE (INDUCTION)

IN(H4SO)-10

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	20
3. Idle Speed	21
4. Ignition Timing	22
5. Intake Manifold Vacuum	23
6. Engine Oil Pressure	24
7. Fuel Pressure	25
8. Valve Clearance	26
9. Engine Assembly	28
10. Engine Mounting	34
11. Preparation for Overhaul	35
12. V-belt	36
13. Crank Pulley	38
14. Timing Belt Cover	39
15. Timing Belt	40
16. Cam Sprocket	45
17. Crank Sprocket	46
18. Valve Rocker Assembly	47
19. Camshaft	50
20. Cylinder Head	54
21. Cylinder Block	61
22. Oil Switching Solenoid Valve	83
23. Intake and Exhaust Valve	85
24. Piston	86
25. Connecting Rod	87
26. Crankshaft	88
27. Engine Trouble in General	89
28. Engine Noise	94