


7. Fuel Pressure

A: INSPECTION

WARNING:

Before removing the fuel pressure gauge, release the fuel pressure.

- 1) Release the fuel pressure.
<Ref. to FU(H4SO)-40, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Disconnect the fuel delivery hose from fuel damper, and connect fuel pressure gauge.

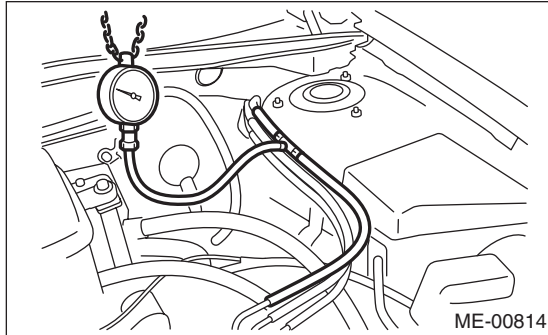

- 3) Install the fuse of fuel pump to main fuse box.
- 4) Start the engine.
- 5) Measure the fuel pressure after warming up the engine.

Fuel pressure:

Standard:

339.5 — 360.5 kPa (3.5 — 3.7 kg/cm², 49 — 52 psi)

NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm², 1 to 3 psi) higher than standard values during high-altitude operations.