


## 2. Accelerator Pedal

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector.
- 3) Remove the nut securing accelerator pedal assembly.

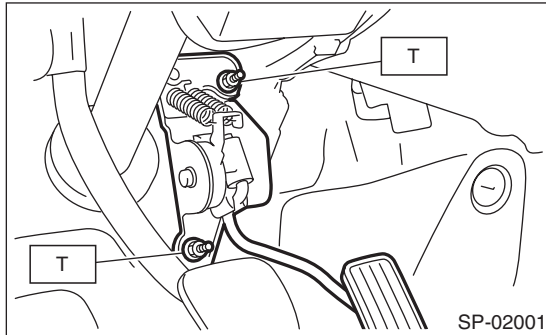

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

*18 N·m (1.8 kgf-m, 13.0 ft-lb)*

### C: DISASSEMBLY

NOTE:

The accelerator pedal cannot be disassembled.

# Accelerator Pedal

SPEED CONTROL SYSTEMS

---

# IGNITION

# *IG(H4SO)*

---

	<b>Page</b>
1. General Description .....	2
2. Spark Plug .....	4
3. Ignition Coil and Ignitor Assembly .....	7
4. Spark Plug Cord .....	8