

Clear Memory Mode

ENGINE (DIAGNOSTICS)

13. Clear Memory Mode

A: OPERATION

1. SUBARU SELECT MONITOR (NORMAL MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Clear Memory} and press the [YES] key.
- 5) When the “Done” and “Turn Ignition Switch OFF” are shown on the display screen, turn the ignition switch to OFF and then Subaru Select Monitor switch to OFF.

NOTE:

- Initial diagnosis of electronic throttle control is performed after memory clearance. For this reason, start the engine after 10 seconds or more have elapsed since the ignition switch was turned to ON.
- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

2. SUBARU SELECT MONITOR (OBD MODE)

- 1) On the «Main Menu» display screen, select the {Each System Check} and press the [YES] key.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System} and press the [YES] key.
- 3) Press the [YES] key after the information of engine type has been displayed.
- 4) On the «Engine Diagnosis» display screen, select the {OBD System} and press the [YES] key.
- 5) On the «OBD Menu» display screen, select {DTC Clear} and press the [YES] key.
- 6) When the “Clear Diagnostic Code?” is shown on the screen, press the [YES] key.
- 7) Turn the ignition switch to OFF and then turn the Subaru Select Monitor switch to OFF.

NOTE:

- Initial diagnosis of electronic throttle control is performed after memory clearance. For this reason, start the engine after 10 seconds or more have elapsed since the ignition switch was turned to ON.
- For detailed operation procedure, refer to the “SUBARU SELECT MONITOR OPERATION MANUAL”.

3. GENERAL SCAN TOOL

For clear memory procedures using the general scan tool, refer to “General Scan Tool Instruction Manual”.

NOTE:

Initial diagnosis of electronic throttle control is performed after memory clearance. For this reason, start the engine after 10 seconds or more have elapsed since the ignition switch was turned to ON.