

General Description

STARTING/CHARGING SYSTEMS

1. General Description

A: SPECIFICATION

Specifications for SOHC U5 model are the same as the SOHC model. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H4SO U5)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	5
4. Electrical Component Location	9
5. Engine Control Module (ECM) I/O Signal	18
6. Engine Condition Data	22
7. Data Link Connector	23
8. General Scan Tool	24
9. Subaru Select Monitor	27
10. Read Diagnostic Trouble Code (DTC)	35
11. Inspection Mode	36
12. Drive Cycle	41
13. Clear Memory Mode	46
14. Compulsory Valve Operation Check Mode	47
15. Malfunction Indicator Light	49
16. Diagnostics for Engine Starting Failure	58
17. List of Diagnostic Trouble Code (DTC)	73
18. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	79
19. General Diagnostic Table	326