


Fuel Tank Pressure Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


10. Fuel Tank Pressure Sensor

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Open the fuel flap lid, and remove the fuel filler cap.
- 3) Disconnect the ground cable from battery.

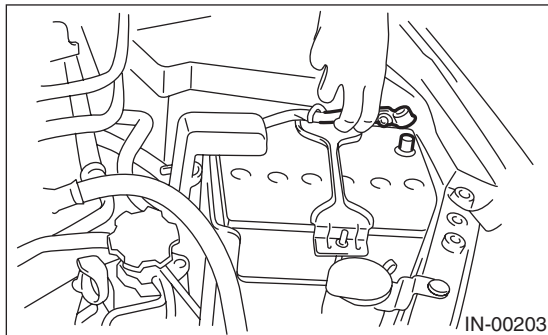

- 4) Lift-up the vehicle.
- 5) Disconnect the connector from the fuel tank pressure sensor.
- 6) Disconnect the pressure hose from the fuel tank pressure sensor.
- 7) Remove the fuel tank pressure sensor along with the bracket.

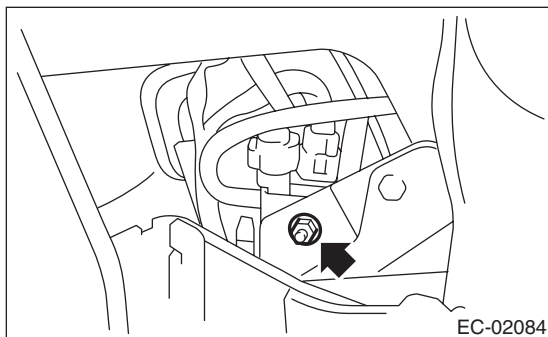


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.4 N·m (0.75 kgf-m, 5.4 ft-lb)

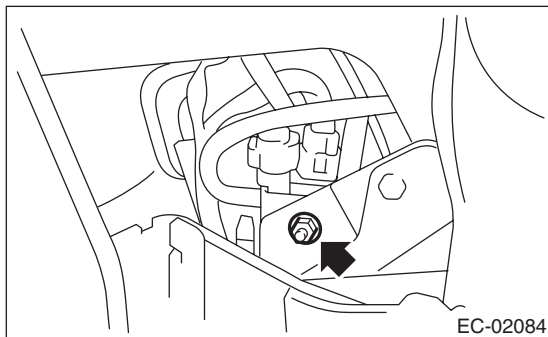

C: INSPECTION

Make sure the hoses are not cracked or loose.