

PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

15.PCV Hose Assembly


A: REMOVAL

CAUTION:

Do not remove if the PCV hose, diagnostics connector and PCV valve are not damaged.

- 1) Remove the intake manifold.
<Ref. to FU(H4DOTC)-11, REMOVAL, Intake Manifold.>
- 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
- 3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

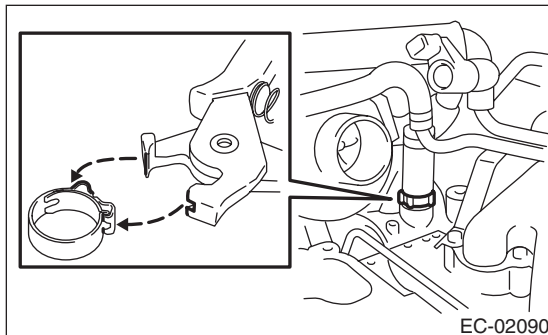


B: INSTALLATION

NOTE:

Replace the clamp with a new part.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

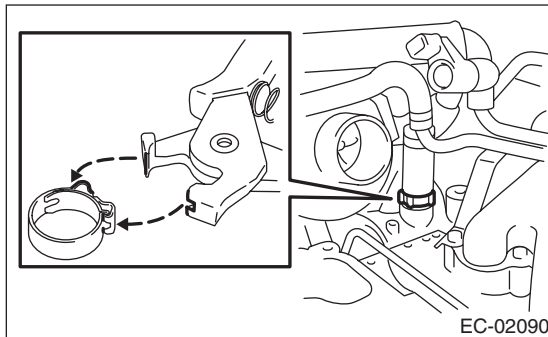

- 2) Install the intake manifold.
<Ref. to FU(H4DOTC)-13, INSTALLATION, Intake Manifold.>

INTAKE (INDUCTION)

IN(H4DOTC)

	Page
1. General Description	2
2. Air Cleaner Element	7
3. Air Cleaner Case	8
4. Air Intake Duct	9
5. Resonator Chamber	10
6. Intake Duct	11
7. Intercooler	12
8. Turbocharger	13
9. Air By-pass Valve	16