


# Front Catalytic Converter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 2. Front Catalytic Converter

### A: REMOVAL

- 1) Remove the center exhaust pipe.  
<Ref. to EX(H4DOTC)-8, REMOVAL, Center Exhaust Pipe.>
- 2) Disconnect the front catalytic converter (A) from the rear catalytic converter (B).

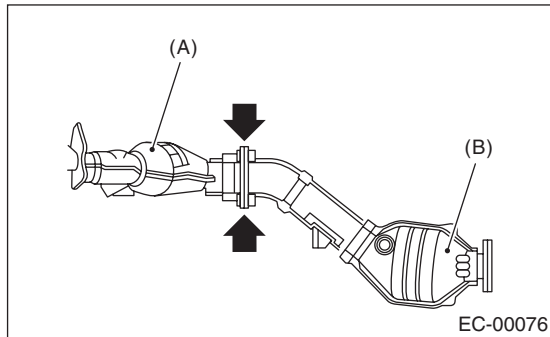

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.