


Fuel Temperature Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

8. Fuel Temperature Sensor

A: REMOVAL


The fuel temperature sensor is integrated into fuel level sensor as one unit; therefore, refer to "Fuel Level Sensor" for removal procedure. <Ref. to FU(H4DOTC)-55, REMOVAL, Fuel Level Sensor.>

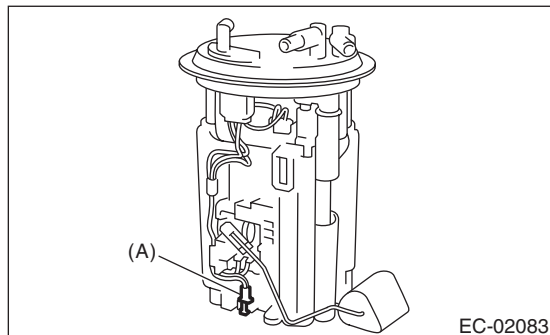

(A) Fuel temperature sensor

B: INSTALLATION

The fuel temperature sensor and fuel level sensor are integrated into one unit; therefore, refer to "Fuel Level Sensor" for installation procedure. <Ref. to FU(H4DOTC)-55, INSTALLATION, Fuel Level Sensor.>

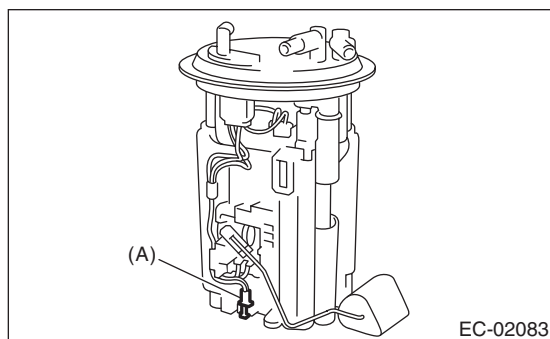

(A) Fuel temperature sensor