


# Rear Exhaust Pipe

EXHAUST

## 5. Rear Exhaust Pipe

### A: REMOVAL


- 1) Lift-up the vehicle.
- 2) Separate the rear exhaust pipe from center exhaust pipe.

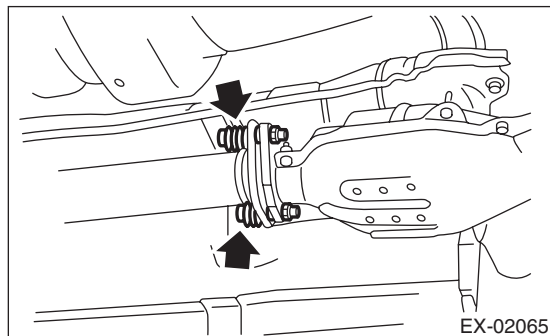


- 3) Separate the rear exhaust pipe from both mufflers.

### CAUTION:

Be careful not to pull down the rear exhaust pipe.

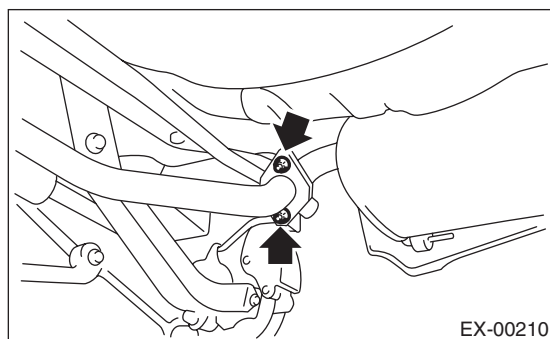


- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the rear exhaust pipe bracket from cushion rubber.

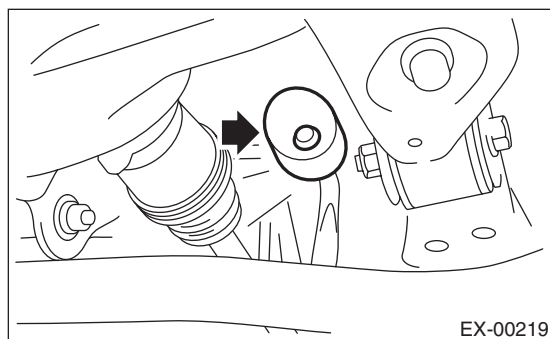

- 6) Remove the rear exhaust pipe.

### B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 2) Install the rear exhaust pipe bracket to cushion rubber.

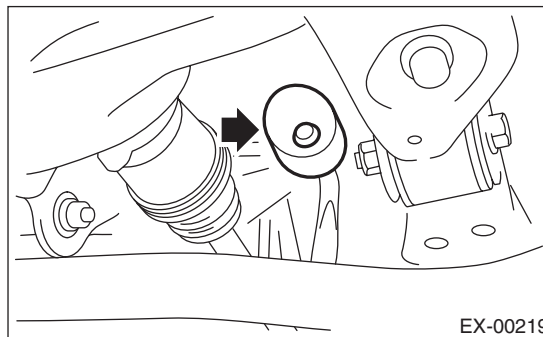


- 3) Install the rear exhaust pipe to both mufflers.

### NOTE:

Use a new gasket.

### Tightening torque:


**48 N·m (4.9 kgf-m, 35.4 ft-lb)**

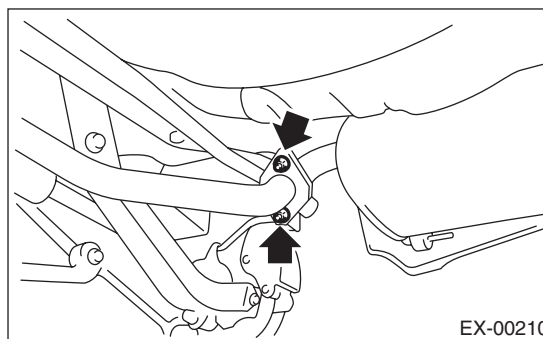

- 4) Install the rear exhaust pipe to center exhaust pipe.

### Tightening torque:

**18 N·m (1.8 kgf-m, 13.3 ft-lb)**

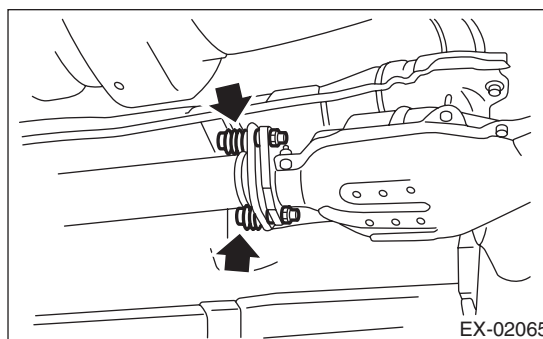

- 5) Lower the vehicle.

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.