


6. Muffler

A: REMOVAL

- Separate the muffler (RH) from the rear exhaust pipe.

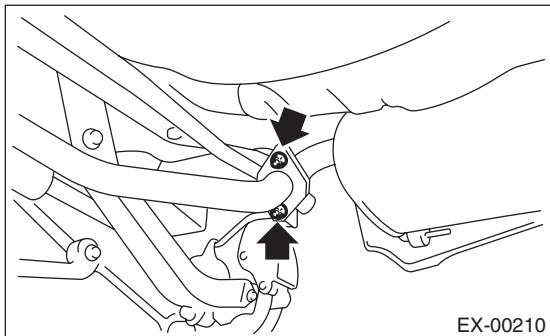


- Remove the cushion rubber, and remove the muffler.

CAUTION:

Be careful not to drop the muffler during removal.

NOTE:

To facilitate removal, apply a spray type lubricant to the mating area of the cushion rubber.

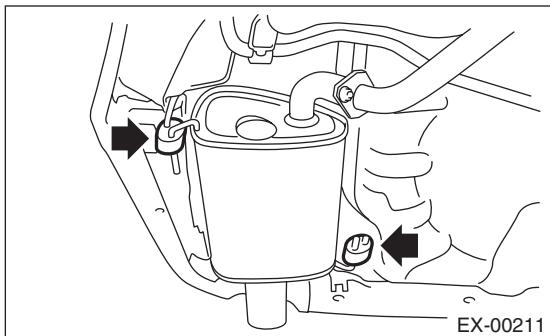

- Perform the same procedures for the muffler (LH).

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Use a new gasket and self-locking nut.

Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

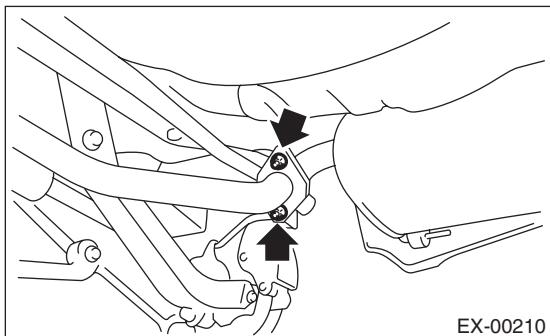

C: INSPECTION

- Check the connections and welds for exhaust leaks.
- Make sure there are no holes or rusting.
- Check the cushion rubber for wear or crack.

Muffler

EXHAUST

COOLING

CO(H4DOTC)

	Page
1. General Description	2
2. Radiator Fan System	8
3. Engine Coolant	13
4. Water Pump	15
5. Thermostat	17
6. Radiator	19
7. Radiator Cap	23
8. Radiator Main Fan and Fan Motor	24
9. Radiator Sub Fan and Fan Motor	27
10. Reservoir Tank	30
11. Coolant Filler Tank	31
12. Engine Cooling System Trouble in General	32