

Oil Flow Control Solenoid Valve

FUEL INJECTION (FUEL SYSTEMS)

15. Oil Flow Control Solenoid Valve

A: REMOVAL

Oil flow control solenoid valve is a unit with camshaft cap.

Refer to "Camshaft" for removal procedure. <Ref. to ME(H4DOTC)-52, REMOVAL, Camshaft.>

B: INSTALLATION

Install in the reverse order of removal.