



16. Wastegate Control Solenoid Valve

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

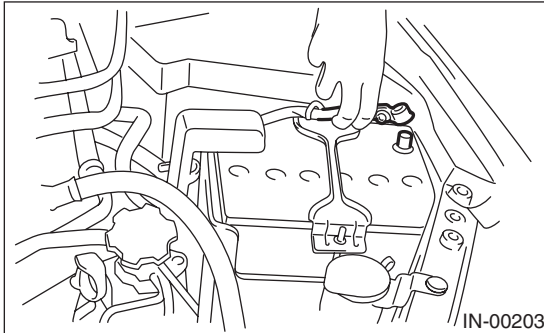

- 3) Disconnect the connector from the wastegate control solenoid valve (A).
- 4) Disconnect pressure hose (B) from the wastegate control solenoid valve.
- 5) Remove the wastegate control solenoid valve from the bracket

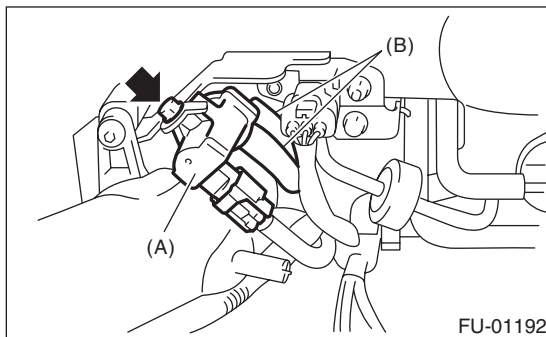

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.5 N·m (0.66 kgf·m, 4.8 ft·lb)