


Exhaust Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)

19. Exhaust Temperature Sensor

A: REMOVAL


- 1) Disconnect the ground cable from battery.

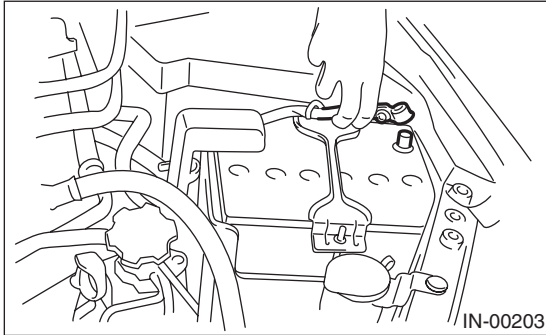

- 2) Remove the joint pipe.
<Ref. to EX(H4DOTC)-11, REMOVAL, Joint Pipe.>
- 3) Apply spray type lubricant to the threaded portion of exhaust temperature sensor, and leave it for one minute or more.
- 4) Remove the exhaust temperature sensor.

CAUTION:

When removing the exhaust temperature sensor, wait until exhaust pipe cools, otherwise it may damage the exhaust pipe.

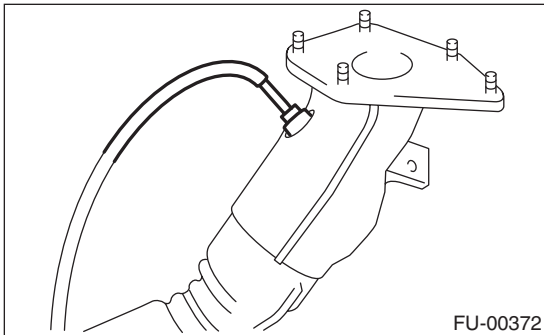

B: INSTALLATION

- 1) Before installing exhaust temperature sensor, apply anti-seize compound only to the threaded portion of exhaust temperature sensor. This facilitates the next removal.

CAUTION:

Never apply anti-seize compound to protector of the exhaust temperature sensor.

Anti-seize compound:

NEVER-SEEZ NS-165 or the equivalent


- 2) Install the exhaust temperature sensor.

NOTE:

Align the harness (A) of exhaust temperature sensor to the marking (B) of joint pipe, and tighten the screws.

Tightening torque:

21 N·m (2.1 kgf-m, 15.2 ft-lb)

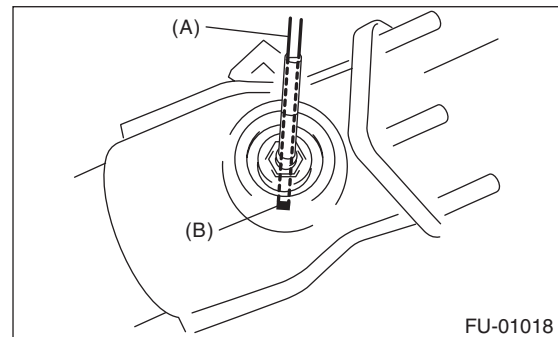

- 3) Install the joint pipe.
<Ref. to EX(H4DOTC)-11, INSTALLATION, Joint Pipe.>
- 4) Connect the battery ground cable to the battery.

