


Fuel Pump Control Unit

FUEL INJECTION (FUEL SYSTEMS)

24. Fuel Pump Control Unit


A: REMOVAL

1) Disconnect the ground cable from battery.

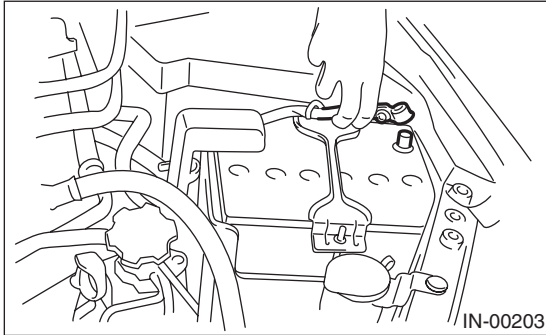

2) Remove the rear quarter trim. <Ref. to EI-61, REMOVAL, Rear Quarter Trim.>

3) Remove the fuel pump control unit.

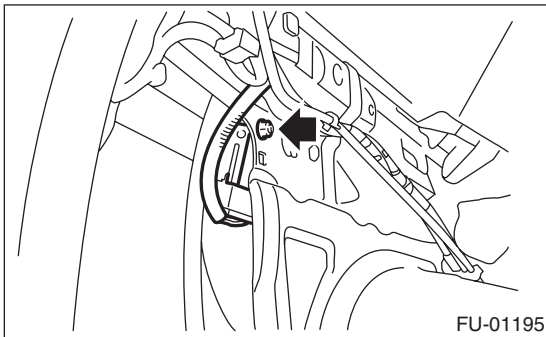

4) Disconnect the connector from fuel pump control unit.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

5.0 N·m (0.5 kgf·m, 3.7 ft·lb)