



## 6. Camshaft Position Sensor

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from battery.

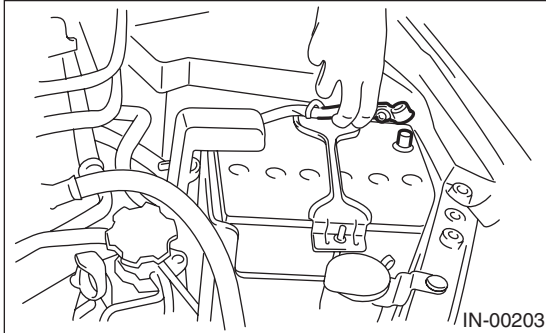

- 3) Disconnect the connector from camshaft position sensor RH.
- 4) Remove the camshaft position sensor RH from the rear side of the cylinder head.

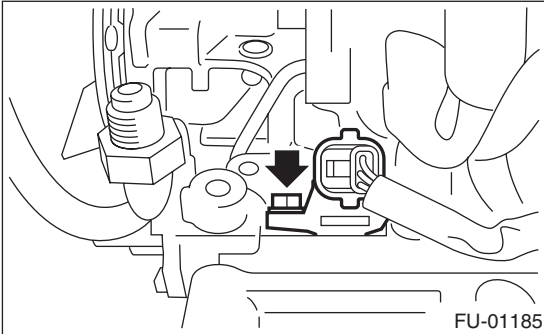

- 5) Remove the cam shaft position sensor LH in the same way as RH.

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

**6.4 N·m (0.65 kgf·m, 4.7 ft·lb)**