


2. Air Cleaner Element

A: REMOVAL


1) Disconnect the ground cable from battery.

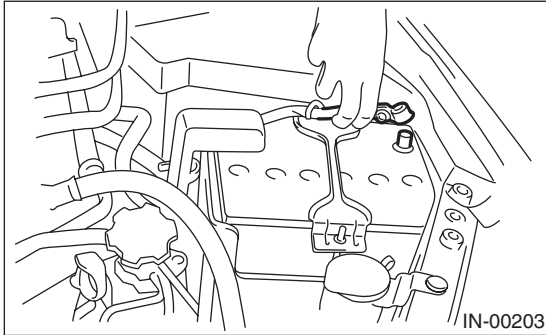

2) Disconnect the connector (A) from the mass air flow sensor.

3) Loosen the clamp (B) which connects the air intake boot and intake duct.

4) Remove the clip (C) from the air cleaner case.

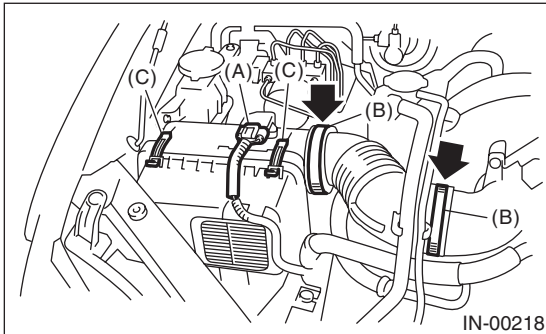

5) Remove the air cleaner case (rear) and air intake boot.


6) Remove the air cleaner element.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

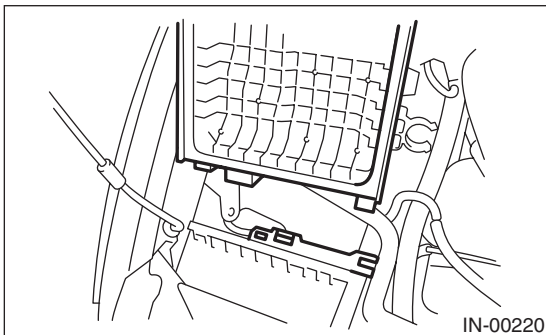

C: INSPECTION

Replace if excessively damaged or dirty.