


Air By-pass Valve

INTAKE (INDUCTION)

9. Air By-pass Valve

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the air by-pass hose (A) from the air by-pass valve.
- 3) Remove the air by-pass valve (B) from the inter-cooler.

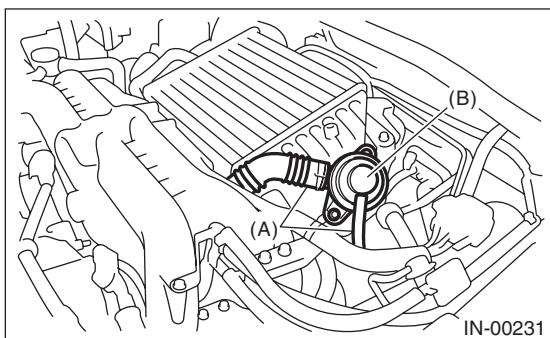


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.5 N·m (0.66 kgf-m, 4.8 ft-lb)

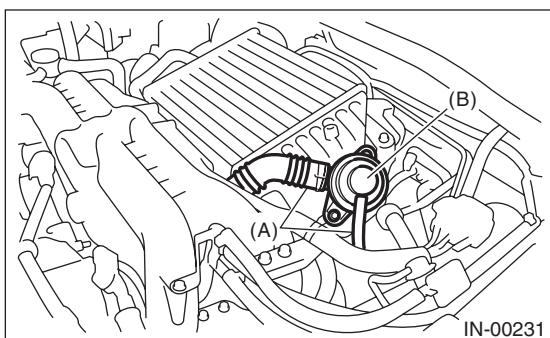

(A) Air by-pass hose

(B) Air by-pass valve

MECHANICAL

ME(H4DOTC)

	Page
1. General Description	2
2. Compression	19
3. Idle Speed	20
4. Ignition Timing	21
5. Intake Manifold Vacuum	22
6. Engine Oil Pressure	23
7. Fuel Pressure	24
8. Valve Clearance	25
9. Engine Assembly	28
10. Engine Mounting	34
11. Preparation for Overhaul	35
12. V-belt	36
13. Crank Pulley	39
14. Timing Belt Cover	41
15. Timing Belt	42
16. Cam Sprocket	50
17. Crank Sprocket	51
18. Camshaft	52
19. Cylinder Head	57
20. Cylinder Block	65
21. Intake and Exhaust Valve	85
22. Piston	86
23. Connecting Rod	87
24. Crankshaft	88
25. Engine Trouble in General	89
26. Engine Noise	94