

## 21. Intake and Exhaust Valve

### A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of intake and exhaust valves. <Ref. to ME(H4DOTC)-57, REMOVAL, Cylinder Head.>  
<Ref. to ME(H4DOTC)-57, INSTALLATION, Cylinder Head.>