

## Drain Filter

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

### 11.Drain Filter

#### A: SPECIFICATION

Canister is a non-disassembled part, so do not remove the drain filter from canister.

Refer to "Canister" for removal and installation procedure. <Ref. to EC(H6DO)-5, REMOVAL, Canister.> <Ref. to EC(H6DO)-5, INSTALLATION, Canister.>