


# PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


## 14.PCV Valve

### A: REMOVAL

1) Disconnect the PCV hose.

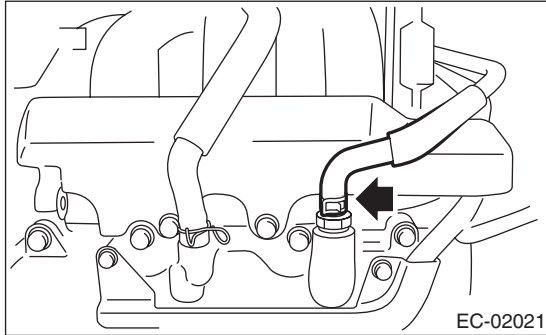

2) Remove the PCV valve from rocker cover.

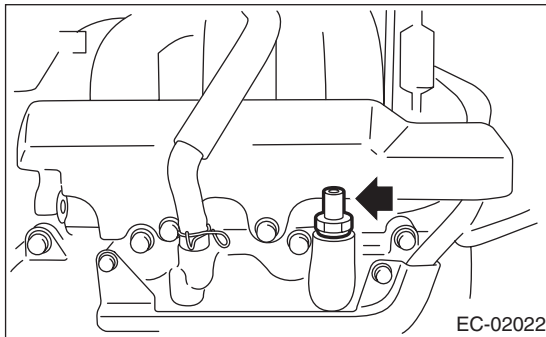

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

**Liquid gasket:**

**THREE BOND 1141 (Part No. 004403006)**

**Tightening torque:**

**25 N·m (2.5 kgf-m, 18 ft-lb)**

# PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

---

# INTAKE (INDUCTION)

# *IN(H6DO)*

---

	<b>Page</b>
1. General Description .....	2
2. Air Cleaner Element .....	4
3. Air Cleaner Case .....	5
4. Air Intake Chamber .....	7
5. Air Intake Duct .....	8
6. Resonator Chamber .....	9